



Trimco®

SINCE 1949

TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE, OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM
CSR@TRIMCOHARDWARE.COM
323.262.4191


OVERVIEW

3092 INSTALLATION GUIDE

PLEASE USE THE FOLLOWING GUIDE FOR INSTALLING THE UNIVERSAL DOOR COORDINATOR.


PARTS

- (A) COORDINATOR X1
- (B) ANGLE CAP X1
- (C) ALLEN KEY X1
- (D) #10 MACHINE SCREWS X4
- (E) SCREW DRIVER (NOT SUPPLIED)

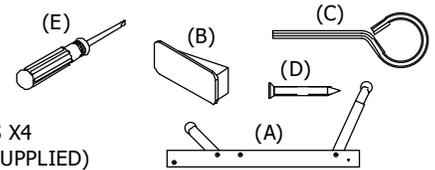


STEP 1

ADJUST THE REGULATING ARM ANGLE AS APPROPRIATE BY TAKING OFF ANGLE CAP AND USING ALLEN KEY.

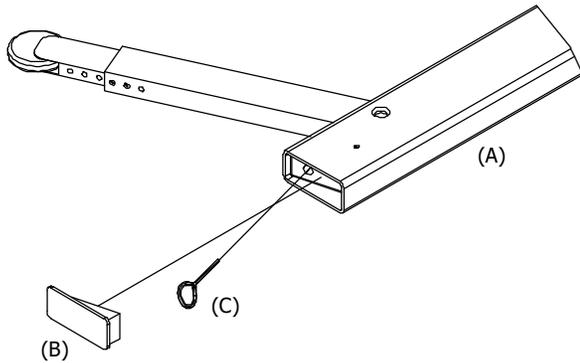


STEP 2

ADJUST THE REGULATING ARM LENGTH FOR MULTIPLE DOOR SIZES USING SCREW DRIVER. MAX ADJUSTABLE LENGTH IS 9.2" AND MIN ADJUSTABLE LENGTH IS 7.7".

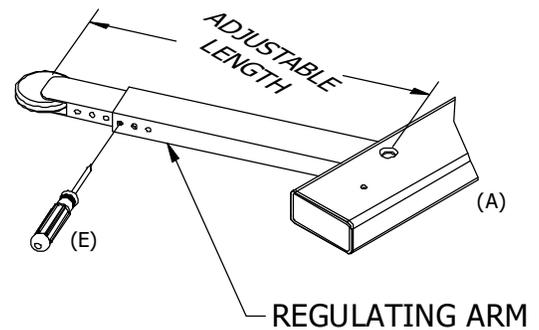


STEP 3

ORIENT INACTIVE ARM WITH INACTIVE DOOR PREP FRAME. PLACE COORDINATOR BODY ON FRAME WITH THE ACTIVE SIDE EDGE OF THE COORDINATOR BODY 12.5" FROM DOOR ENTRANCE.

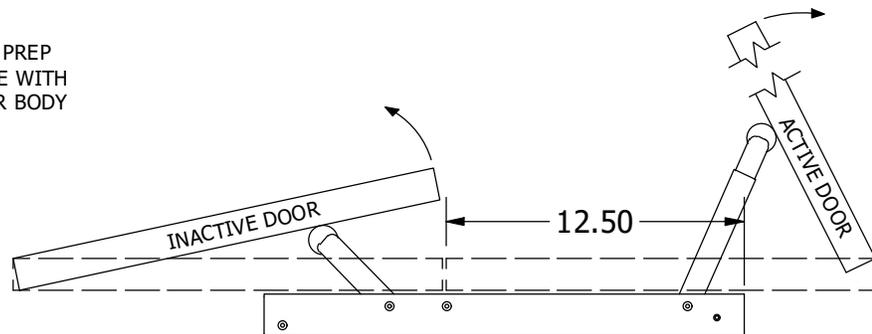

STEP 4

MOUNT COORDINATOR TO FRAME USING THE PROVIDED MACHINE SCREWS. SEE DIMENSIONS FOR LOCATING MOUNTING SCREW HOLES.

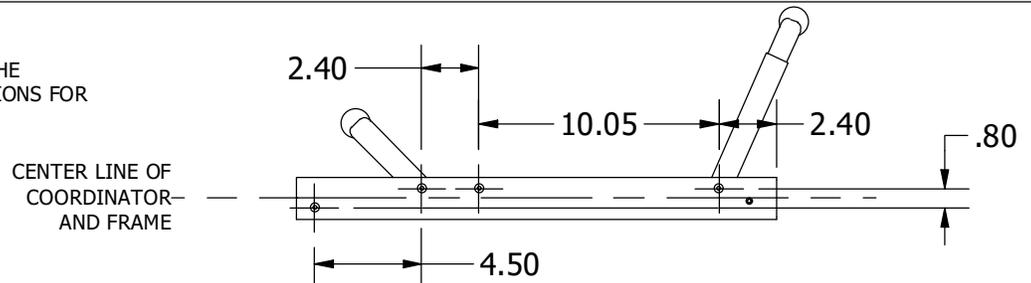

NOTES

- ITEMS SHOWN NOT TO SCALE
- ALL DIMENSIONS IN INCHES UNLESS SPECIFIED
- THIS INSTALLATION GUIDE IS PROVIDED FOR USE ONLY ON THE JOB FOR WHICH IT WAS REQUESTED.
- TRIMCO RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE.
- TRIMCO WILL NOT BE RESPONSIBLE FOR ERRORS OR DAMAGE CAUSED BY THE USE OF OUT-OF-DATE TEMPLATES.
- FOR THE LATEST PRODUCT INFORMATION GO TO: WWW.TRIMCOHARDWARE.COM
- FOR ADDITIONAL HELP, PLEASE CONTACT CUSTOMER SERVICE VIA EMAIL AT CSR@TRIMCOHARDWARE.COM