



9000 Series Lever Trim Instructions

See proper trim template when required. Several lever styles available see catalog.

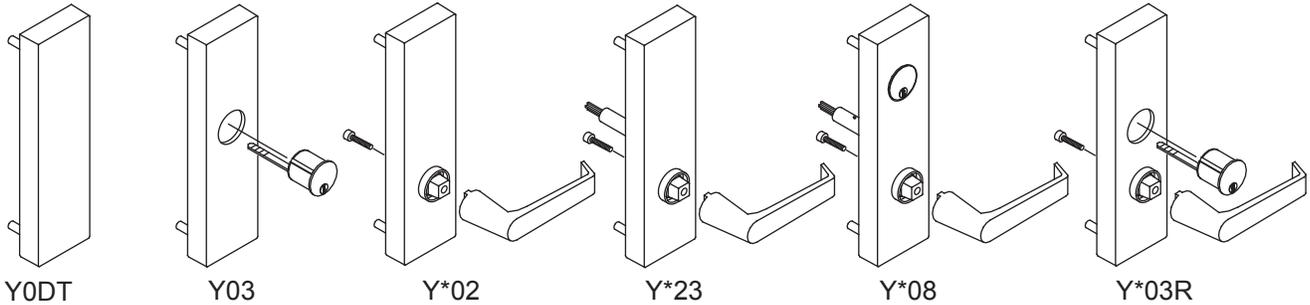

Cylinder specifications, installation and handle installation.

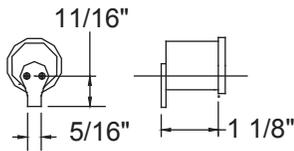



Standard trim

IMPORTANT

Note: Drive pin must be installed in vertical position when installing 08/09 trims.

Tighten Securely

Note: Install trim in un-locked or active position.

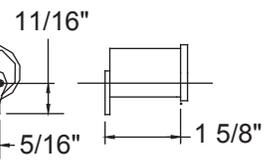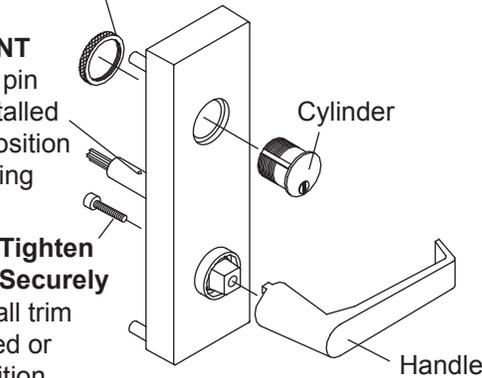

Mortise trim


Nylon plug must face sideways. Tap spindle in with hammer.

Spindle

Tighten Securely

IMPORTANT


Note: All lever handles except for "clutch" are shipped unattached. To install; **Place handle in desired position and attach with allen screw located in back of trim plate.** 5/32" Allen wrench required. To change hand on "clutch" trim rotate and "break" lever around to desired hand.

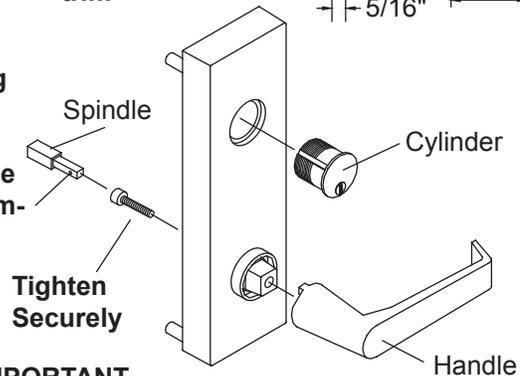

Standard "03" trim


Note: If door is less than 2 1/4" thick tailpiece will have to be cut down.

Tighten Securely

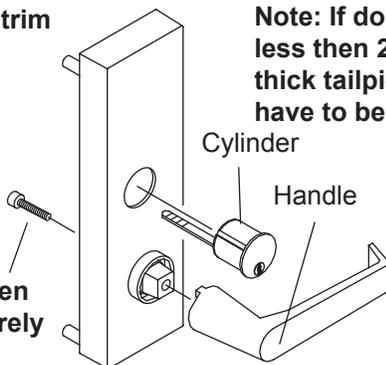

"09" Function (for cylinders without removable cam).

Insert mortise cylinder through trim, then install "09" cam as shown, place notch of cam around leg of actuator and install new cylinder nut.

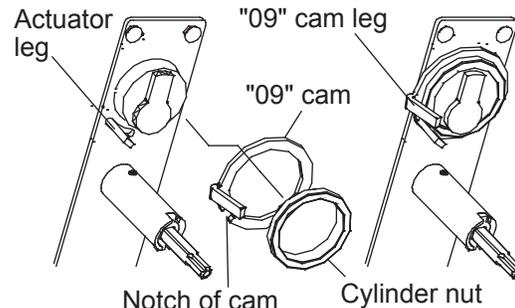

Due to individual cam configurations and cylinder lengths, the leg of the "09" cam may have to be bent slightly to function properly. 95054195 "09" Pack

"09" Function with removable cams



76012513 Cam for standard mortise cylinder

76012514 Cam for IC mortise cylinders