



Alarmed Exit Device

Arming Instructions

- A. Turn key in counter clockwise direction. A chirp sound will be heard and the visual indicator will flash red. The alarm unit will flash green once a second for 10 seconds allowing passage through the door before the alarm goes into armed position which is indicated by another chirp and a flash of green/red.
- B. The armed position will be indicated by a green flash of light approximately every 20 to 30 seconds.
- C. When the push bar is depressed, the alarm will sound continuously until the alarm is reset by turning key clockwise to turn off the alarm function and then counter clockwise to turn it back on. If the alarm is not manually reset it will reset itself after 10 minutes.
- D. LOW BATTERY ALERT: Indicated by red flash & audible chirp every 5 seconds. If this occurs, Replace battery. Battery life approximately 1 year.

