


Installation Instructions




ASSA ABLOY

1. Check box contents. See previous page for components and handing information.
2. After marking door inside face for device location (Device Instructions), transfer "Vertical Reference Centerline" from inside to outside door face. Follow steps 2a. and 2b. below.


3. Transfer "Horizontal Reference Centerline" from inside to outside door face.
4. Align trim template and tape to outside door face. **CAUTION:** Office copiers and facsimile machines may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the dimensions written on the template to locate the holes on the door (do not use the template as a door marker).
5. Spot holes and prepare door for trim.
6. Mount trim to door thru holes "B". Fasten, finger tight only, with 2 screws and washers seating on door, as shown in Figure 1.
7. Cut trim tailpiece as shown in Figure 2.
8. Seat device so that trim tailpiece penetrates cam slot, as shown in Figure 1. Continue as shown in device instructions.

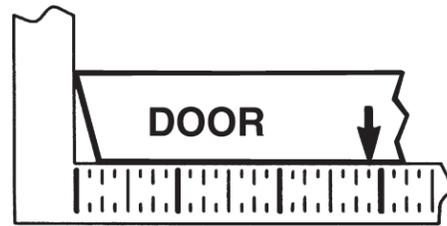

2a. MEASURE INSIDE LINE LOCATION.

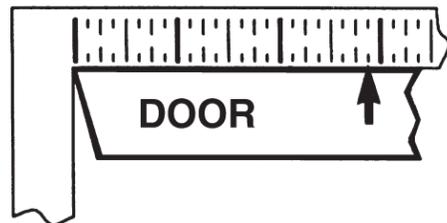

2b. TRANSFER DIMENSION TO OUTSIDE FACE.

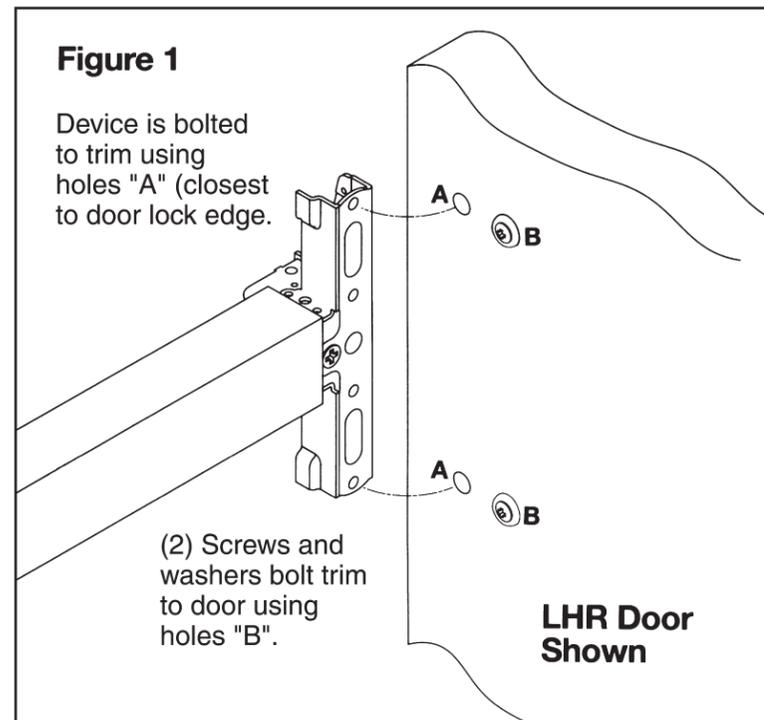


ASSA ABLOY

F950 and *950 SERIES HEAVY DUTY TRIM


For use with ED5000 Series Exit Device (Wood and Metal Doors)

FM 195 10/18

WARNING
This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.
08/2018

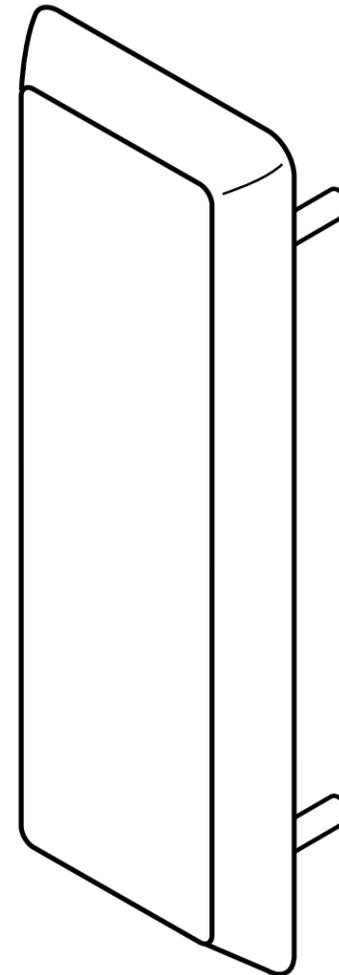

F950 SERIES
BLANK TRIM
Non-Handed

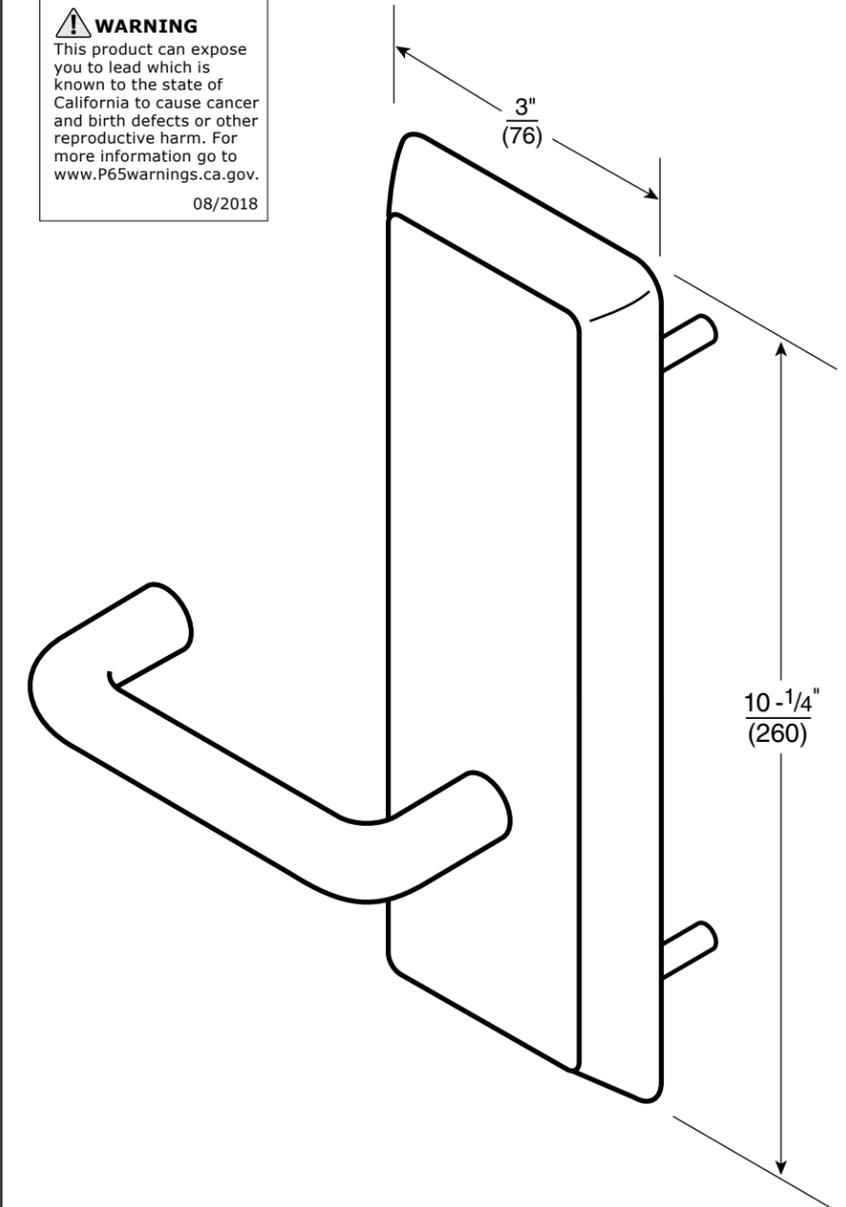


*950 SERIES
DUMMY TRIM
Handed (RHR or LHR)
Rigid Lever

* Represents prefix letter(s) for various lever designs.

ASSA ABLOY, the global leader in door opening solutions

Outside Door Face

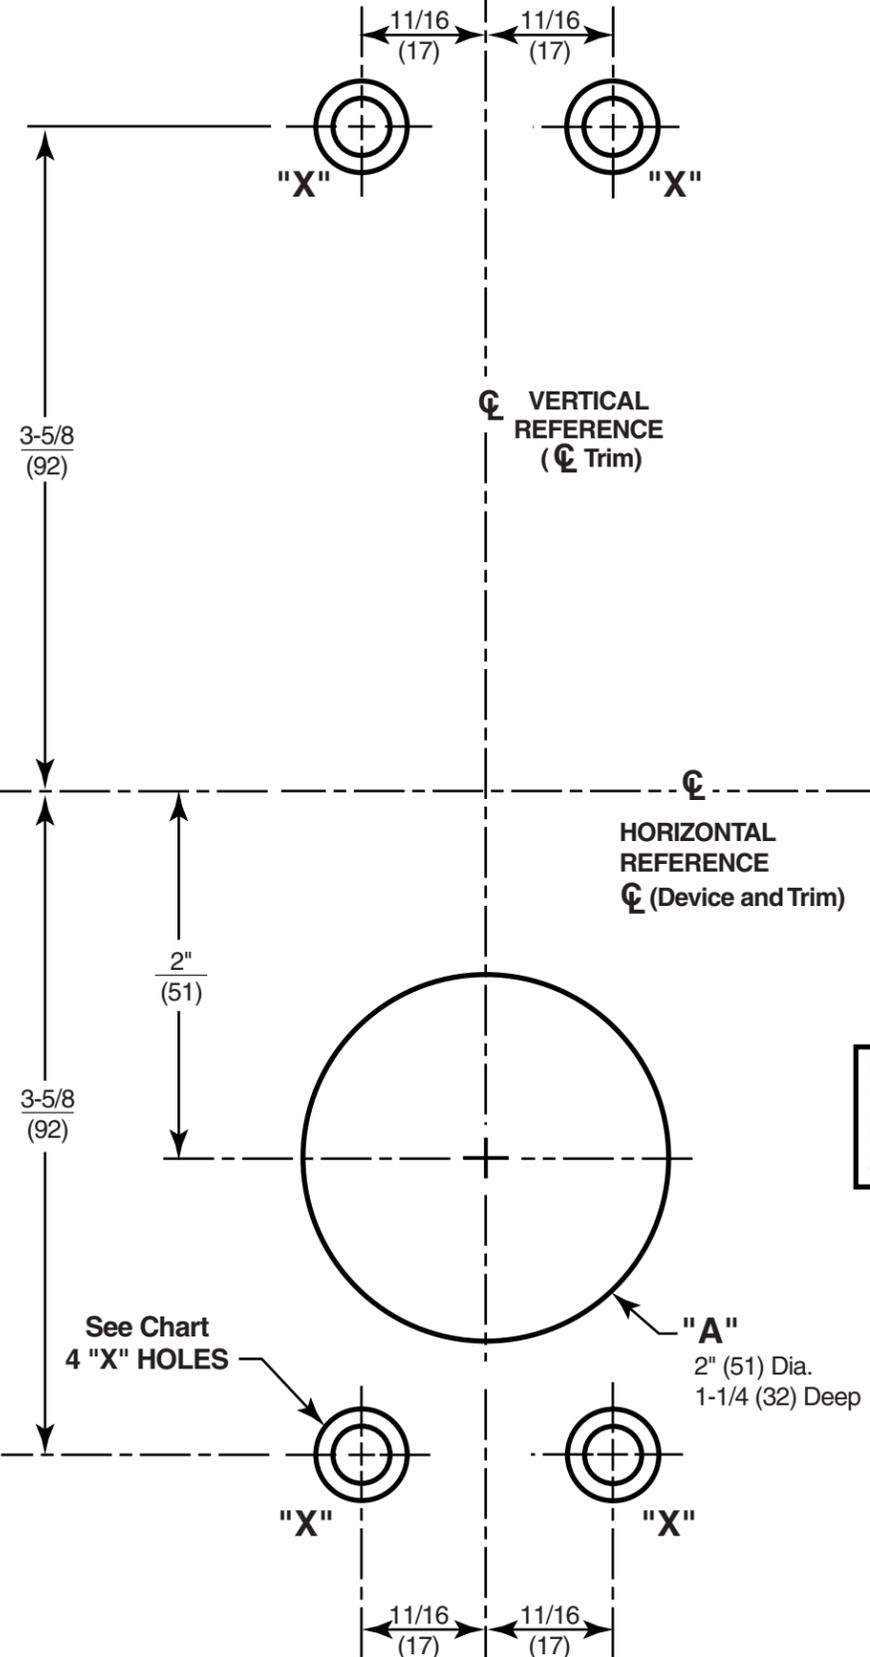

Trim Template

HOLES MARKED "X" (4 Places)	
METAL DOORS:	
Inside Face	5/16" (8) Dia.
Outside Face	1/2" (13) Dia.
WOOD DOORS:	
	1/2" (13) Dia. Thru

Dimensions given in $\frac{\text{Inches}}{\text{(mm)}}$

TRIM	HOLES
F950	X
*950	A, X



Corbin Russwin
ASSA ABLOY


In U.S.:
Corbin Russwin, Inc.
225 Episcopal Road
Berlin, CT 06037 USA
Phone: 800-543-3658

Technical Product Support:
Phone: 888-607-5703


In Canada:
ASSA ABLOY Door Security Solutions Canada
160 Four Valley Drive
Vaughan, Ontario, Canada L4K 4T9
Phone: 800-461-3007

Trim Components

F950 Blank Trim

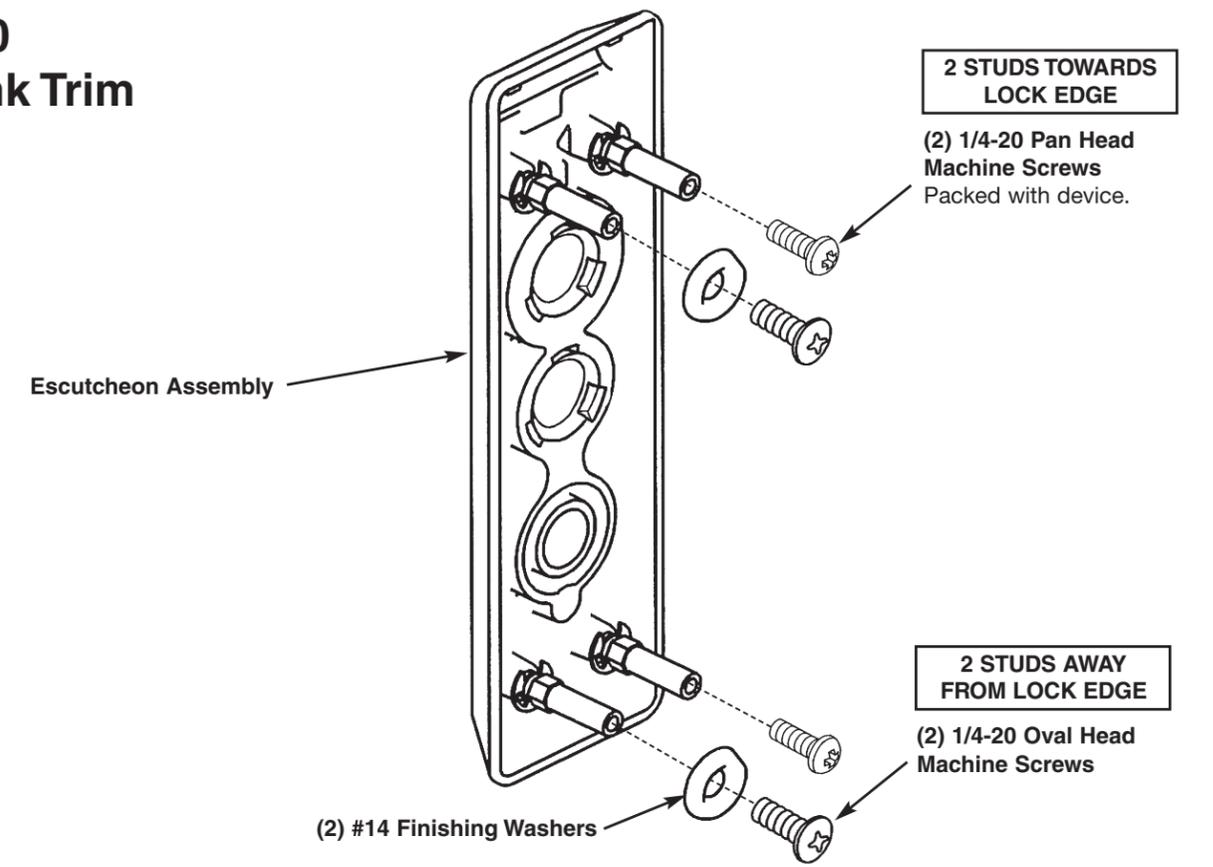

*950 Series Dummy Trim

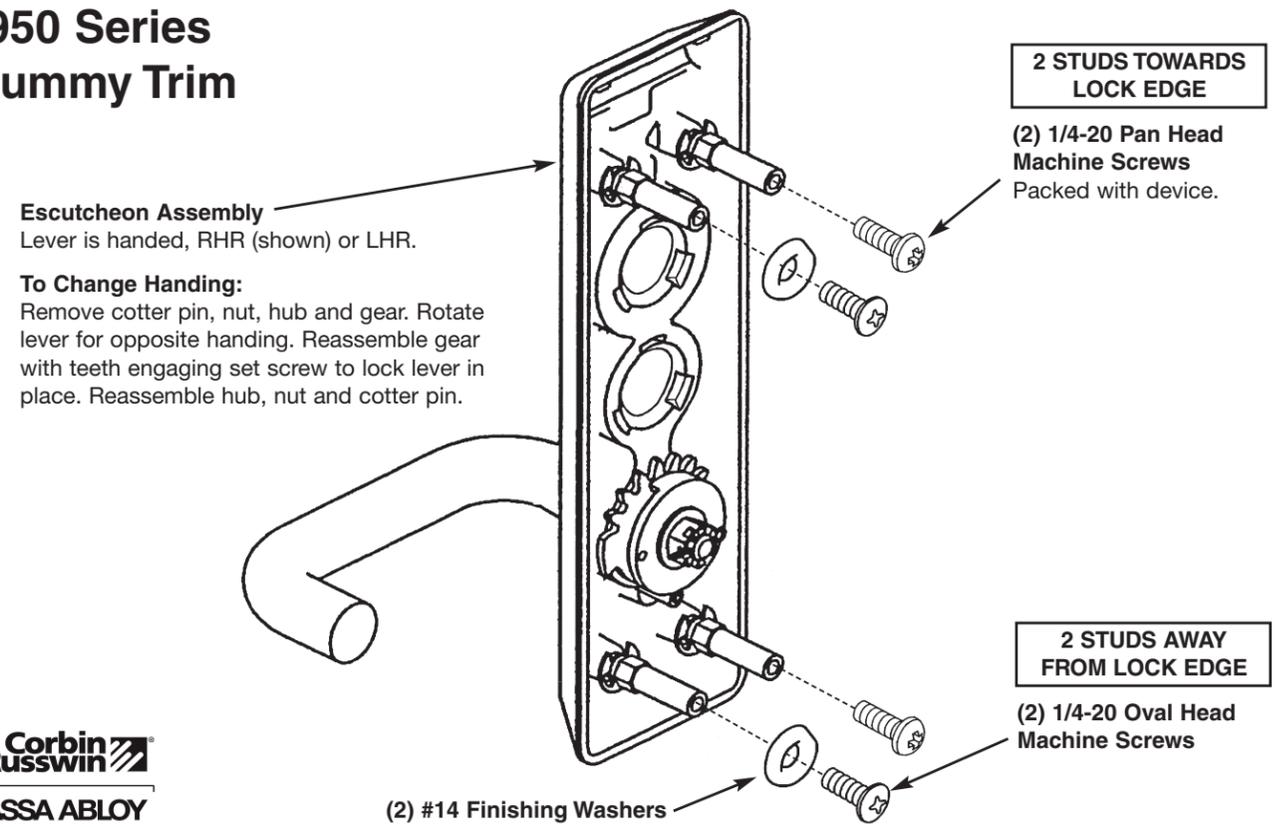

Corbin Russwin
ASSA ABLOY