




L-VGLF-OG

Security Lite Kit – 9" x 9"

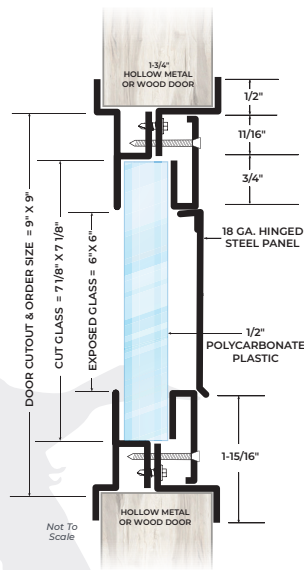

Designed for Use on 1 1/4\"

INSTALL L-VGLF-OG LITE KIT

1. Cut out door in accord with door manufacturer's procedure.
2. Outside: apply a bead of silicone sealant to the inside lip of the outer frame and position outer frame in the door cut-out.
3. Inside: Attach inner frame to outer frame with (8) #6 x 5/8" hex-head screws.
4. Apply a bead of silicone sealant around perimeter of polycarbonate plastic and insert into kit.
5. Attach inner panel with #8 x 1" TEK or #8 x 3/4" TEK (Model L-VGLF-SF only) screws provided.

FIELD PAINTING: for best results scuff finish with a Scotch-Brite® pad prior to painting.