


INSTALLATION INSTRUCTIONS

L-VGLF-SF

Security Lite Kit – 11" x 11"



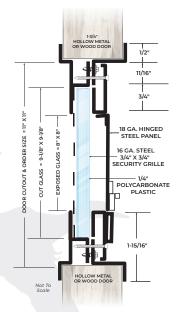

Designed for Use on 13/4" Thick Doors Manufactured Within Door Industry Tolerance of +/- 1/16".

INSTALL L-VGLF-SF LITE KIT

- Cut out door in accord with door manufacturer's procedure.
- Outside: apply a bead of silicone sealant to the inside lip of the outer frame and position outer frame in the door cut-out.
- 3. Inside: Attach inner frame to outer frame with (8) #6 x 5%" hex-head screws.

- 4. Apply a bead of silicone sealant around perimeter of polycarbonate plastic and insert into kit.
- 5. Attach inner panel with #8 x 1" TEK or #8 x 3/4" TEK (Model L-VGLF-SF only) screws provided.

FIELD PAINTING: for best results scuff finish with a Scotch-Brite® pad prior to painting.

