

RIGHT HAND

REVERSE BEVEL

INSTALLATION INSTRUCTION CAL-ROYAL FOR N-MR7700 SERIES MORTISE EXIT DEVICE

LEFT HAND

REVERSE BEVEL

SURFACE OF DOOR FOR **EXIT DEVICE APPLIED MUST**


BE FLUSHED.

BEFORE INSTALLING DEVICE, PLEASE CHECK:

- 1. IF DOOR FITTED AND HUNG.
- 2. SIZE OF EXIT DEVICE, FUNCTION AND DESIGN...
 - 2.1. 36"DOORS, CAN BE CUT TO FIT DOORS DOWN TO 30" WIDE.
 - 2.2. 48"DOORS, CAN BE CUT TO FIT DOORS DOWN TO 36" WIDE.

OUT

2.3. HAND OF DEVICE AGAINST APPLICATION.

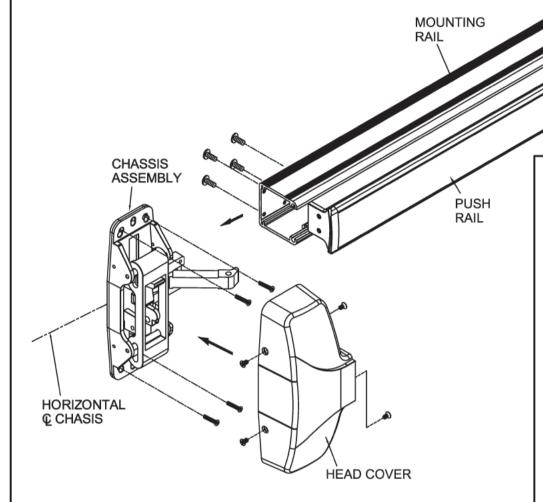

3. APPLY EXTERIOR TRIMS

If ESC lever trim is used, attach outside trim and cylinder.


END CAP

SLIDING

SHIM

RAIL MOUNTING


BRACKET

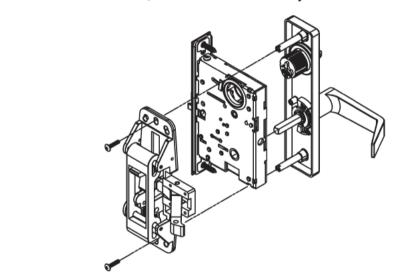

1. PREPARE DOOR AND MOUNT LOCK


Tape templates to inside face and edge of doors according to directions given on template. Drill holes and mortise door for lock as indicated.


Fasten mortise lock in plate NOTE:If screwless rose trim is used -- refer to trim instructions and mount lock in conjunction with rose and inner plates

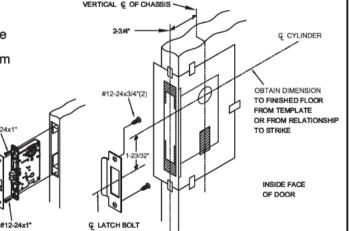


4. APPLY RAIL ASSEMBLY


1. CHECK THE SIZE OF DEVICE, IF CUTTING TO LENGTH IS REQUIRED. 2. DETERTMINE CUT OFF LENGTH "X" BY SUBTRACTING 1-3/4" (44.5mm) FROM "Y". MARK CUT OFF POINT ON MOUNTING RAIL.

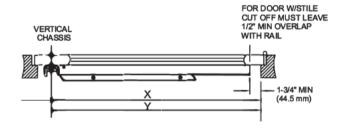



3. DEPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASSIS. LEVEL RAIL AND FASSTEN CHASIS AND MOUNTING PLATE.







DOOR WITH (2) ROUND HEAD

2. ATTACH CHASIS TO DOOR


- 2.1 Attach chassis to Rail, then lock push rail down,using
- 2.2 Position chassis and rail on door, so that lever arm is under rear section of Mortise lock lever. Then lift up until latchbolt is completely retracted.
- 2.3 With chassis in this position and rail horizontal, mark location of chassis mounting holes. Drill holes
- 2.4 Release Push rail, and dis-ass'y chassis from rail.

Then, mount chasis on door.




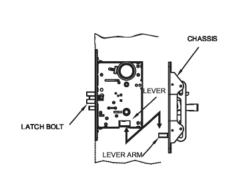


5. APPLY COVER AND STRIKES

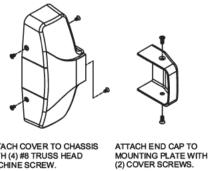

ATTACH COVER TO CHASSIS WITH (4) #8 TRUSS HEAD MACHINE SCREW.




ATTACH STRIKE TO DOOR STOP WITH (2), STRIKE SCREW AND LOCK WASHER




ATTACH STRIKE TO DOOR STOP WITH (2), STRIKE SCREW AND LOCK WASHER

TO CHANGE HANDING OF N-FMR77 EXIT DEVICE


1. LHR

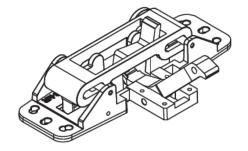

- 2-1. Remove chassis pin & main slide & tube.
- 2-2. Remove lift lever & lift lever pin.
- 2-3. Rotate 180° main slide & lift lever

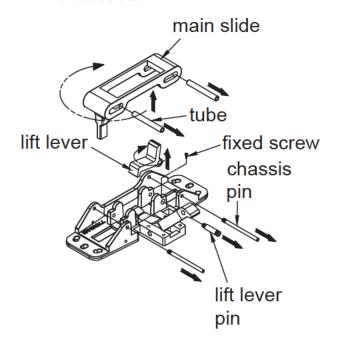

- 3-1. Reassemble lift lever at opposite side, as shown.
- 3-2. Replace main slide and chassis pin and lift lever pin. and fixed screw.

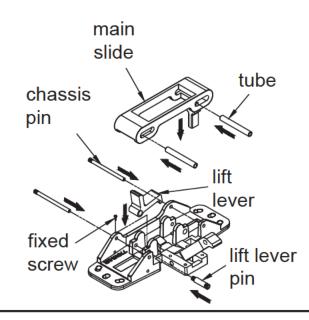

1. RHR Done.

