


Rockwood 19BFB Bottom Fire Bolt

The global leader in
door opening solutions

For Installation Assistance, Call Rockwood Products at 800-458-2424 • www.rockwoodmfg.com

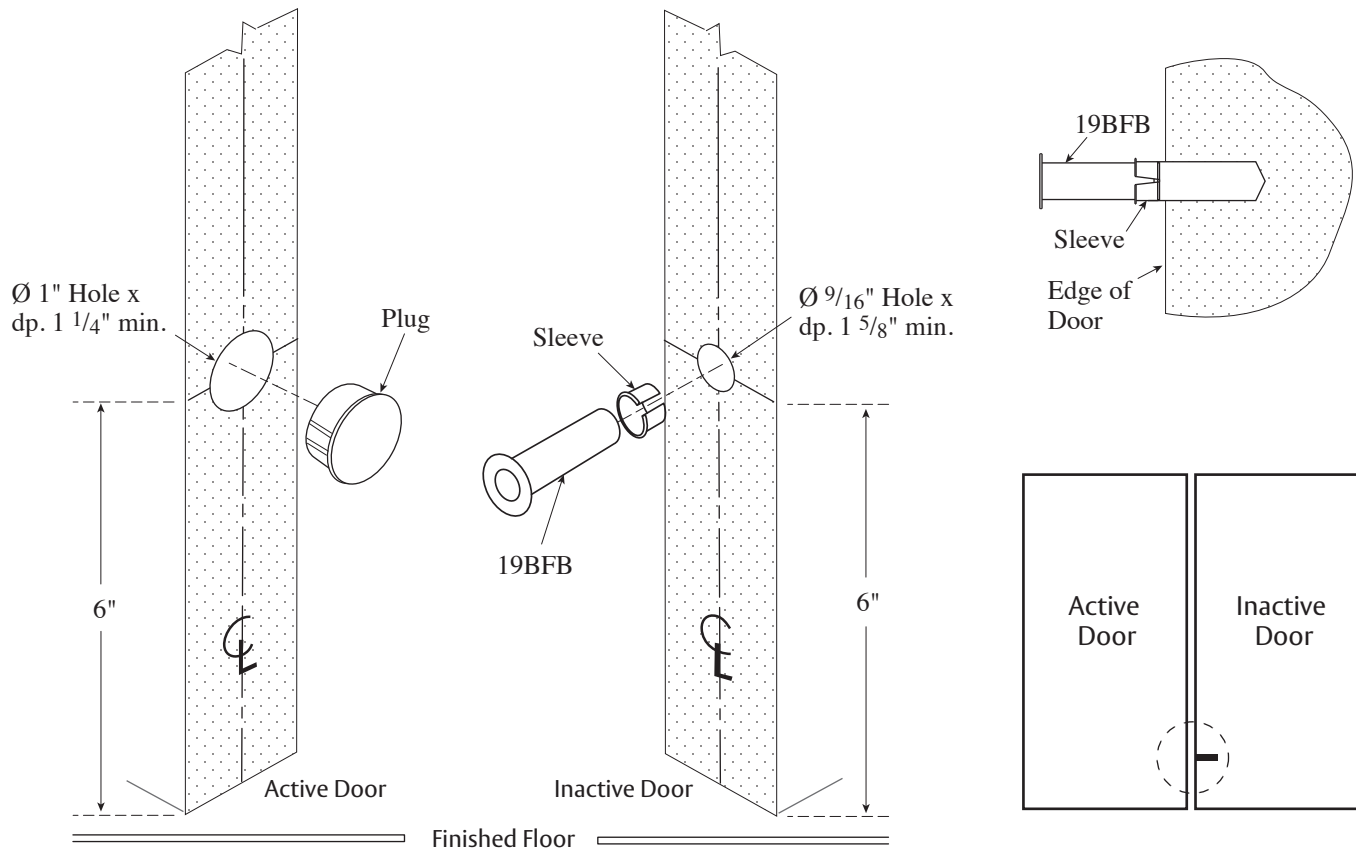

NOTE: Thermal pin to be centered in door thickness; Gap between thermal pin and receiving hole $\frac{1}{2}$ " max.

Installation Instructions

Inactive Door

1. Measure 6" from bottom of the Inactive Door.
2. Drill a $\text{Ø } \frac{9}{16}$ " hole x dp. $1 \frac{5}{8}$ " for 19BFB.
3. Install 19BFB by striking squarely with a hammer.

Active Door

1. Drill a $\text{Ø } 1$ " x dp. $1 \frac{1}{4}$ " hole for Plug at the same height as the 19BFB.
2. Install plug in door by striking with a hammer.
3. For zero clearance doors, counterbore $\text{Ø } 1 \frac{1}{4}$ " x dp. $\frac{1}{16}$ " for plug.

NOT TO SCALE

IMPORTANT: The 19BFB will project during a fire. Do not cover with any edge mounted door hardware.