

# TEMPLATE T-488


Effective date: March 15, 2022  
Supercedes: All Previous

**NOT TO SCALE**

**ROCKWOOD®**  
**ASSA ABLOY**

Experience a safer  
and more open world

## ROCKWOOD 488 HEADER DOOR STOP

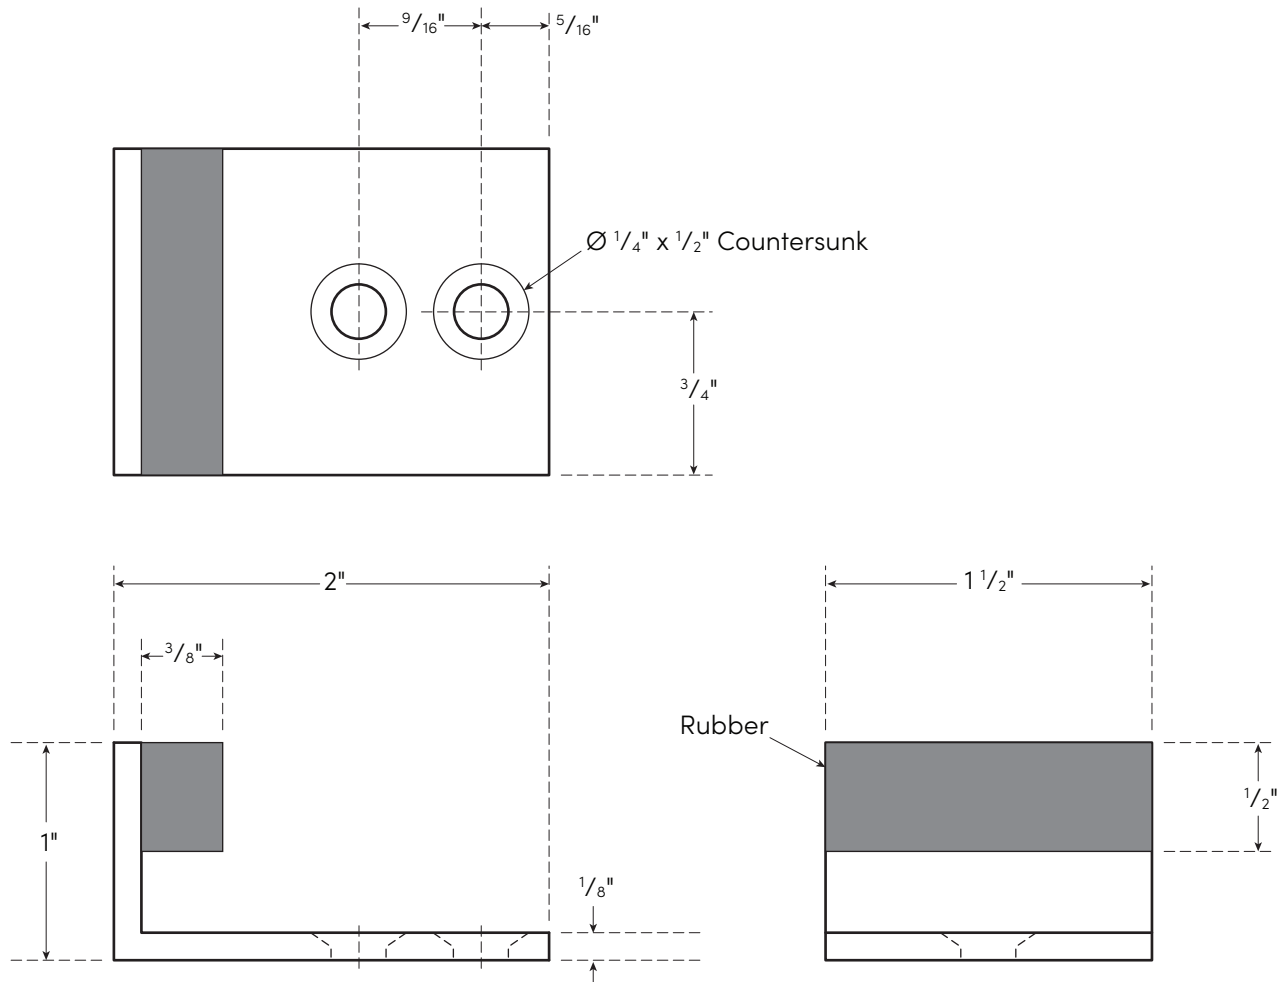

**Material:** Solid Brass

**Fasteners Note:** 2 ea. #12 x  $1\frac{1}{2}"$  Flat Head Wood Screws, 2 ea. Plastic Anchors;  
2 ea. #12-24 x 1" Flat Head Machine Screws