


TD-SWB

Door Bottom Brush Sweep

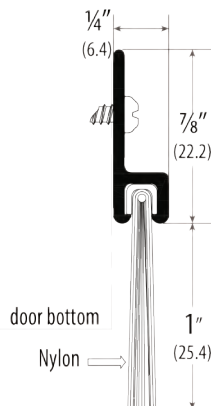

Door sweeps are installed on one side of a door to keep out cold drafts. It should be installed on the inside bottom edge of doors that swing into the building, and on the outside bottom edge of doors that swing outwards.

Cutting Brush:

1. Detach brush prior to trimming.
2. Cut off extra brush using a cutting tool (lineman side cutting pliers) and crimp the brush strand ends.
3. Re-install the brush until it is level with one end of the retainer and crimp to hold it in place.

TD-SWB-AL-36

Length: 36"

Nylon Brush Insert

Testing/Ratings:



Door Bottom Retainer:

1. Determine the required length, mark and cut the door bottom sweep to full width of the door.
2. When trimming, remove parts of the brush seal to be trimmed and use a cutting tool (lineman side cutting pliers) to compress the end of seal. This will retain the brush. Trim the aluminum retainer with a hacksaw.
3. Close the door and place door bottom sweep along outside bottom edge of door so that it makes contact with threshold. Mark door in center of slotted holes.
4. Drill pilot holes in door at marks.
5. Fasten door bottom sweep to door with screws.
6. Adjust to ensure firm contact with threshold / above finish floor.