


## TD-TAST

### T-Shaped Astragal

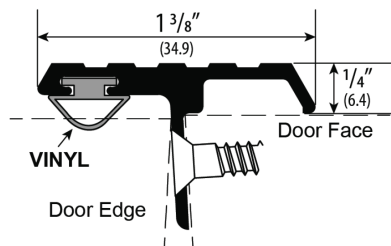

Vinyl Insert  
Mill Finish Aluminum

### Testing/Ratings:



### Installation Instructions:

1. Determine the required length, mark and cut the astragal to full length of the door, leaving a slightly longer insert at each end.

Note: For best seal, insert should touch header at top and threshold (or floor) at the bottom.

2. Install the astragal on the active door edge. (See Illustration below)

4. Drill pilot holes in door at marks.

5. Fasten astragal to door with screws.

6. Adjust to ensure firm contact with threshold / above finish floor.

