




TD-SWN

Door Bottom Sweep

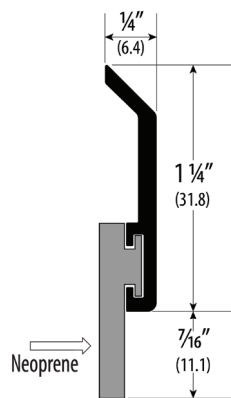

TD-SWN

Neoprene Insert
Mill Finish Aluminum

Testing/Ratings:



Door sweeps are installed on one side of a door to keep out cold drafts. It should be installed on the inside bottom edge of doors that swing into the building, and on the outside bottom edge of doors that swing outwards.

Installation Instructions:

1. Determine the required length, mark and cut the door bottom sweep to full width of the door.
2. Close the door and place door bottom sweep along outside bottom edge of door so that it makes contact with threshold. Mark door in center of slotted holes.
3. Drill pilot holes in door at marks.
4. Fasten door bottom sweep to door with included screws.
5. Adjust to ensure firm contact with threshold / above the finish floor.

TRU DOOR.COM | PHOENIX, AZ