630F & 634F

Exit Device Trim

Installation Instructions

ACCENTRA
ASSA ABLOY

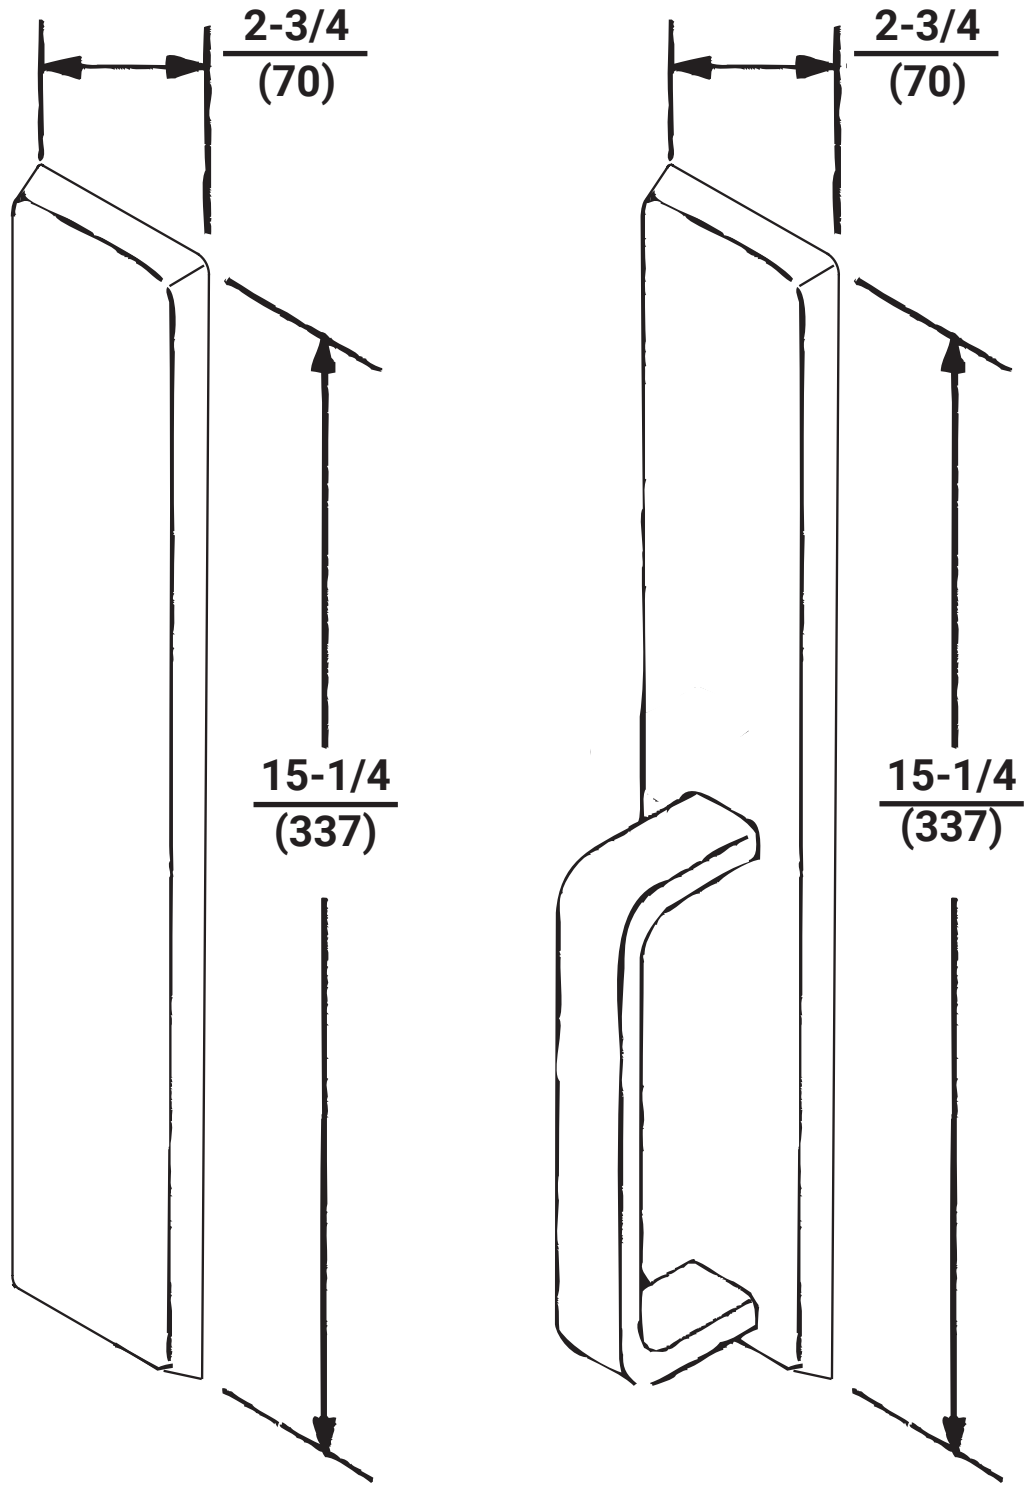

630F Trim

634F Trim
(Push-Pull Door
when dogged)

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.

80-8470-0634-000 04/24

1-855-557-5078 Ext. 2 • www.accentra-assaabloy.com

Experience a safer
and more open world

Copyright © 2005, 2013, 2023, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

ACCENTRA

ASSA ABLOY

630F & 634F
Exit Device Trim
Installation Instructions

1. Parts

630F Trim

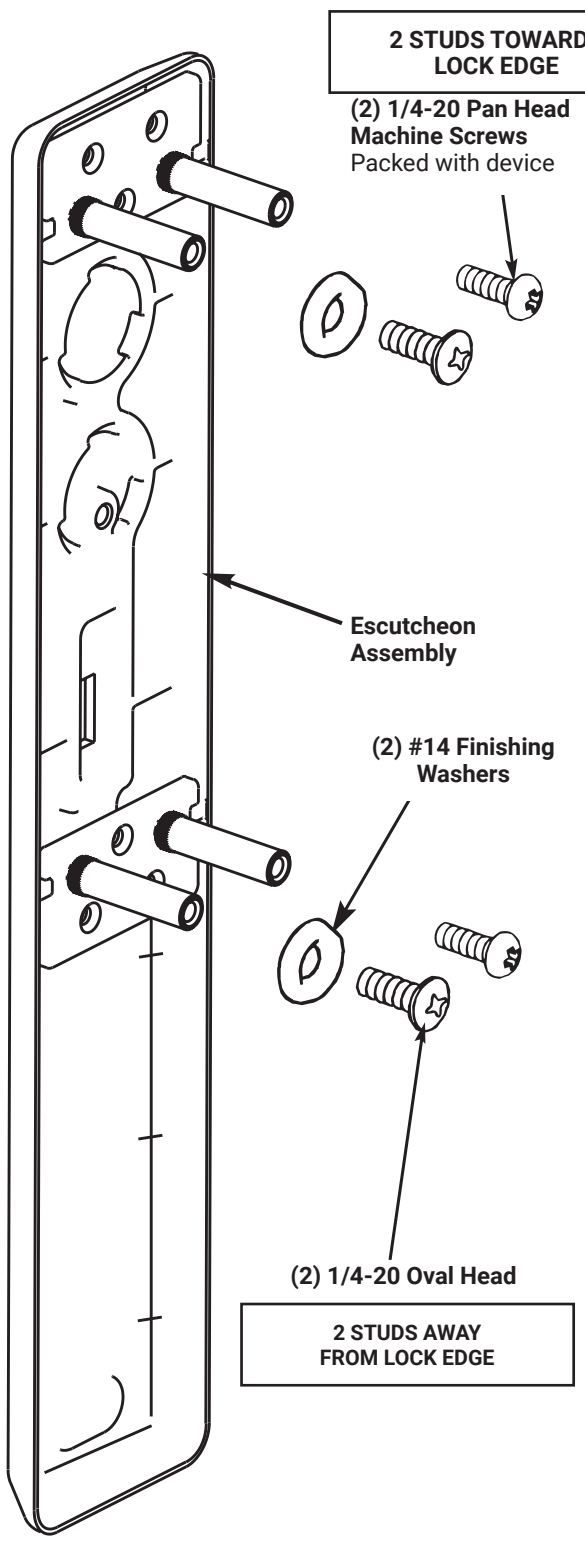

634F Trim

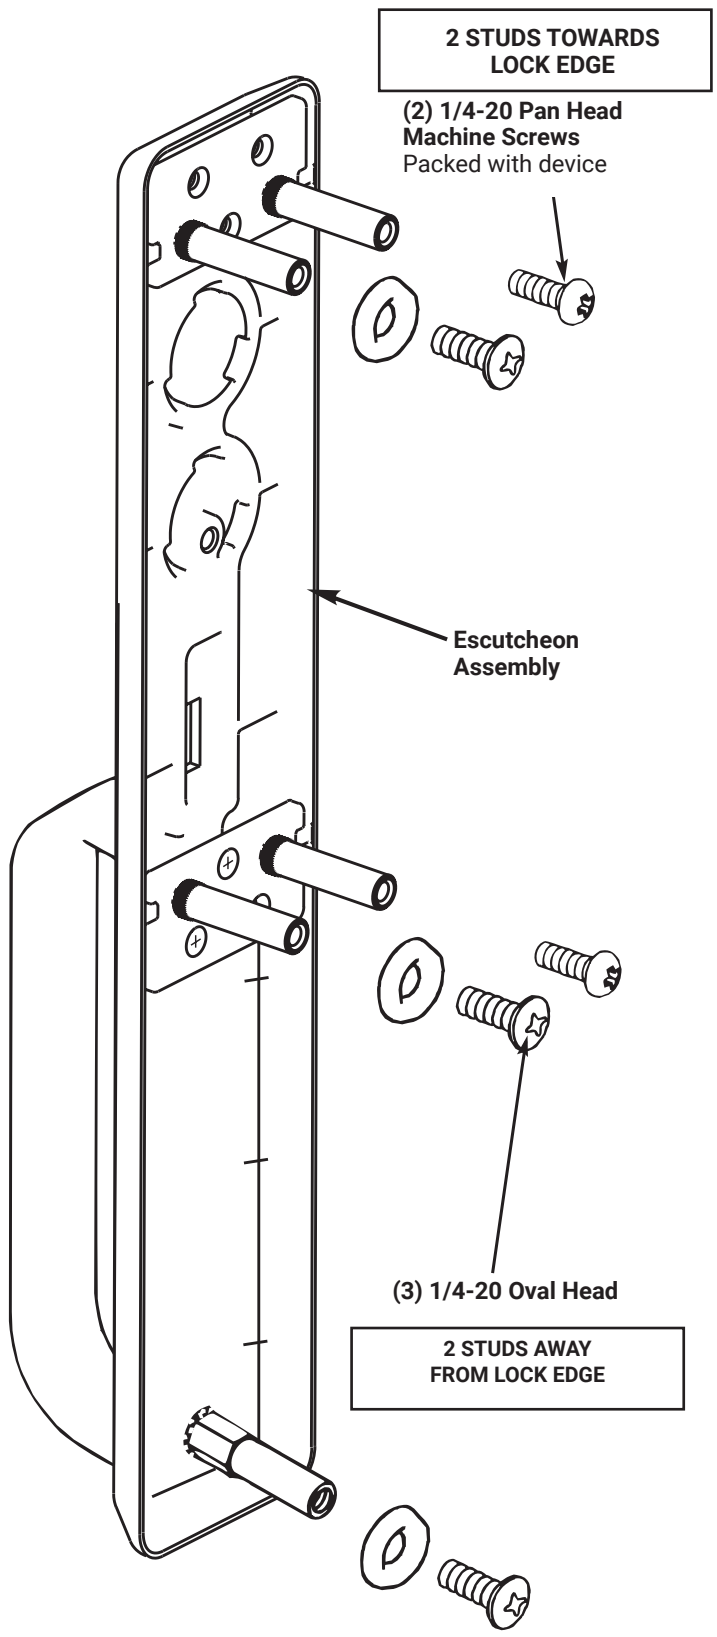

80-8470-0634-000 04/24

Experience a safer and more open world

1-855-577-5078 Ext. 2 • www.accentra-assaabloy.com

Copyright © 2005, 2013, 2023, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

ACCENTRA
ASSA ABLOY

2. Installation

1. Check box for components.
2. After marking door inside face for device location (Device Instructions), carry “Vertical Reference Centerline” from inside door face. Follow steps 2a. and 2b., shown to the right.
3. Transfer Horizontal Reference Centerline from inside to outside door face.
4. Align trim template and tape to outside door face.
5. Spot holes and prepare door for trim.
6. Mount trim to door thru holes “A” with (2) mounting screws as shown in Fig. 2. Use the remaining (3) oval headed screws and finish washers to secure the trim to the door surface thru location “B” as shown in Fig. 2, the third screw and washer attaches to the hole located at the bottom of the trim.
7. Continue as shown in device instructions.

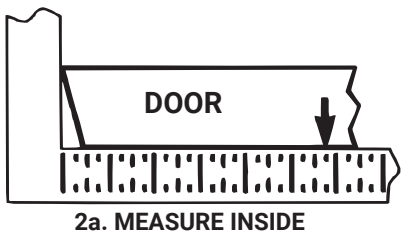

2a. MEASURE INSIDE LINE LOCATION.

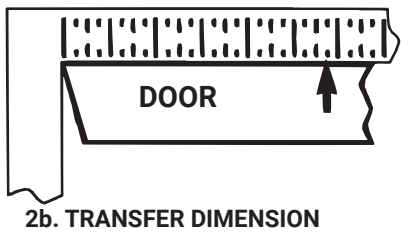

2b. TRANSFER DIMENSION TO OUTSIDE FACE.

Figure 2

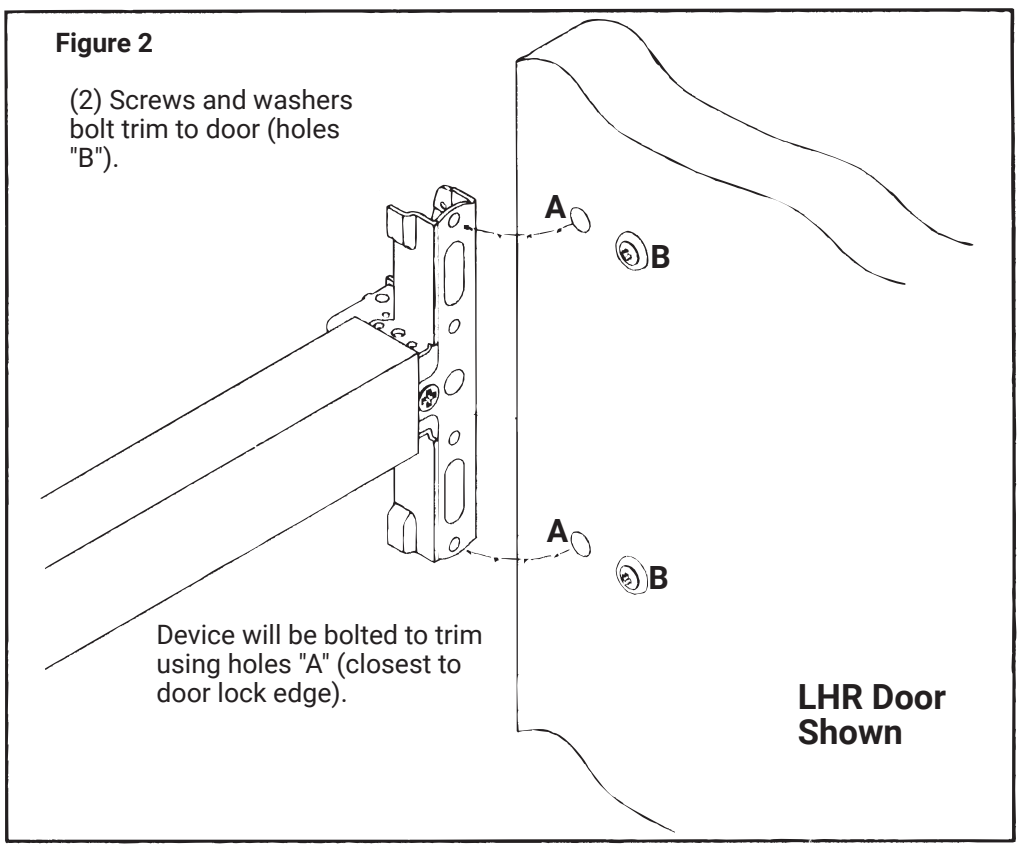

80-8470-0634-000 04/24

Copyright © 2005, 2013, 2023, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

Experience a safer and more open world

630F & 634F Trim Template

HOLES MARKED "A" & "X"
METAL DOORS: **Inside Face 5/16" (8) Dia.** **Outside Face 1/2" (13) Dia.**
WOOD DOORS: **1/2" (13) Dia. Thru**

Dimensions given in Inches / (mm)

TRIM	HOLES
630F	X
634F	A, X
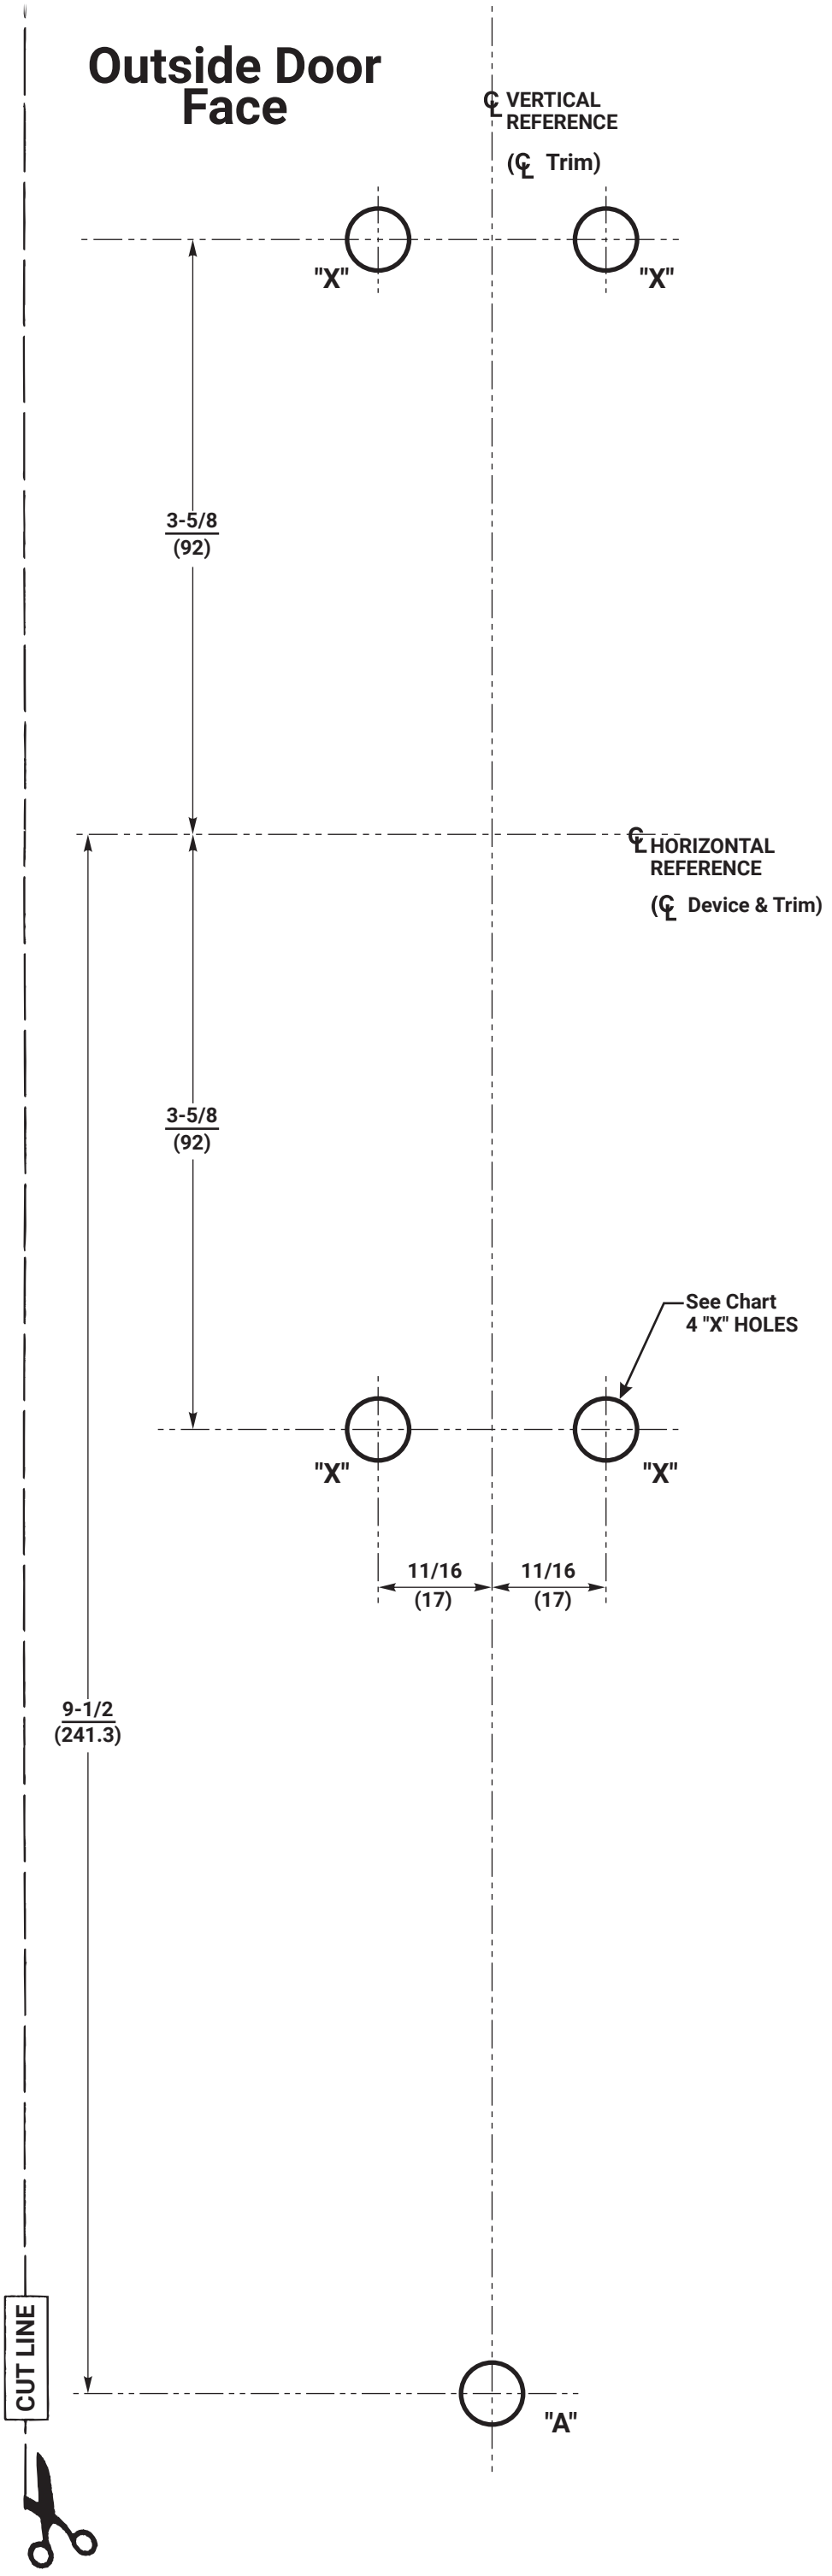
CAUTION: Office copiers and facsimile machines may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the holes on the door (do not use template as a door marker).