
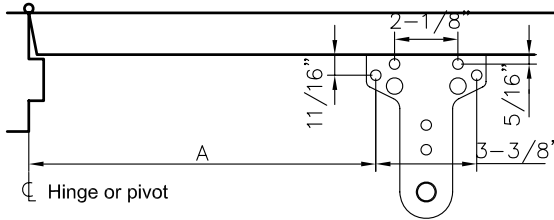
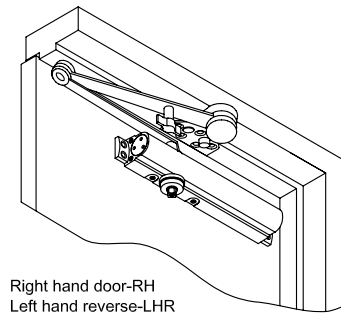






# 316 HD Hold Open Arm with Dead Stop Installation Instructions

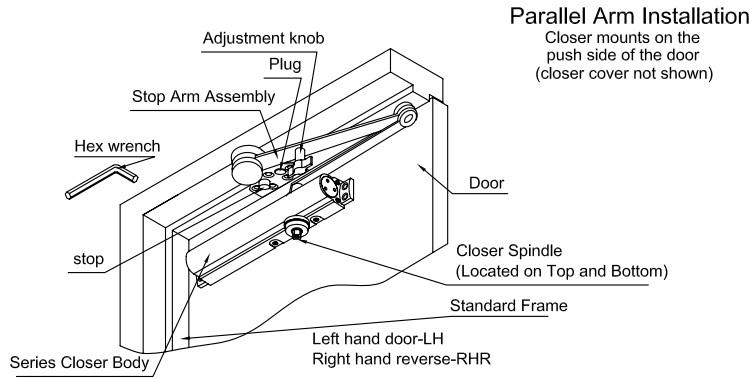

Do not scale drawing  
Left hand door shown  
Dimensions are in inches

Dim"A"	Dim"B"	Door opening with Stop	Door opening without Stop
8-3/4"	3-1/2"	85°Max	90°
6-1/2"	1-1/4"	110°Max	101°-150°

\*Door/Wall/Hardware/Jamb conditions permitting

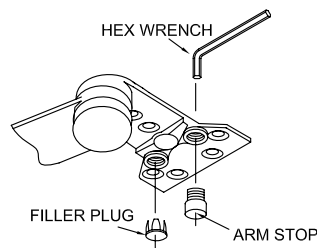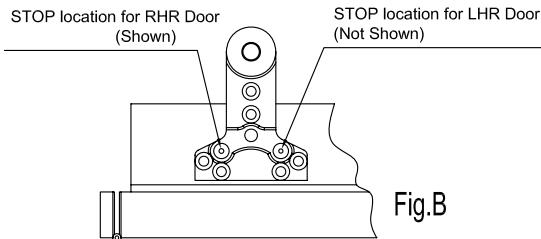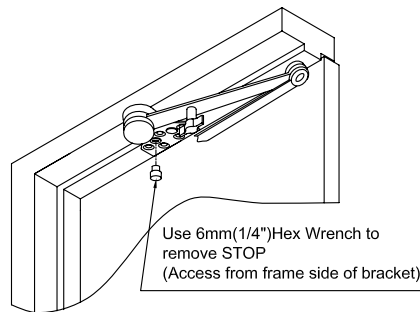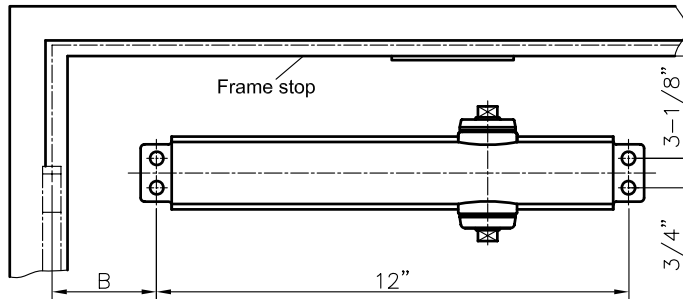

## INSTRUCTIONS

1. Select degree of opening and use dimensions shown to locate 4 holes on door for closer body and 4 holes on underside of frame for PA plate. Prepare door and frame for fasteners. See "Preparation for Fasteners"

Preparation for Fasteners		
Fasteners	Door or Frame	Drill-Size
Self Drilling/Tapping Machine Screw	Hollow Metal or Aluminum	No drill required
	Wood(see note)	3/16" pilot hole
1/4"-20 Machine Screw	Hollow Metal	Drill #7(0.201"dia.) & Tap 1/4"-20
1/4"-20 Machine Screw used with Through Bolt	Hollow Metal or Aluminum	9/32" drill closer side & 3/8" drill opposite side
	Wood	3/16" pilot hole
Wood Screw	Wood	3/16" pilot hole

NOTE: Wood doors/frames must have a pilot hole drilled when using Self Drilling /Tapping screws.

Before installing closer body, set spring power for door using Power adjustment chart below.

Preparation Adjustment Chart		
door size inches	Full clockwise turns of closer power adjustment nut (from "0" turns)	
	316 series only	
	interior door	exterior door
24"-30"	-7	-5
30"-34"	-3	0
34"-38"	0	4
38"-48"	4	8
48"-54"	8	13
54"-60"	13	
NOTE: Maximum of 20 turns (360°) of power adjustment Nut.Closer is shipped set at 7 turns from the factory		

2. Install closer body according to the left hand mounting dimensions and use mounting screws to install the closer body to the door and the parallel arm bracket to the frame soffit.  
NOTE: Be Sure the speed regulating valves are toward the lock stile of door.
3. Before installing closer body, set spring power for door using Power adjustment chart below.
4. Install closer body on door with power adjustment nut towards the hinge. The Heavy Duty Arm with Deadstop accommodates both RH/LHR and LH/RHR applications. Be sure to check that the STOP is located in the proper hole for your application.If the STOP needs to be relocated use 1/4" hex wrench to remove the STOP and HOLE PLUG and then swap their positions.(Fig.B)
5. Mount PA plate to frame using 4 mounting screws.
6. Use adjustable wrench to rotate spindle 45 degrees towards the hinge side of door and place main arm on spindle. Secure arm to closer by installing and tightening spindle bolt.
7. Adjust closer and install cover.

NOTE: If the arm will not flex enough to get in onto the spindle, loosen the screws holding the PA plate to the frame soffit. This will provide the needed flexibility to seat the arm on the closer spindle.