

10X Line Cylindrical Lockset

1

Tools Required

- #2 Phillips screwdriver
- Push pin (provided)
- 7/16" drill bit
- 1/8" drill bit
- 5/32" drill bit
- 2-1/8" Bore
- 1" Bore

2

Package Contents

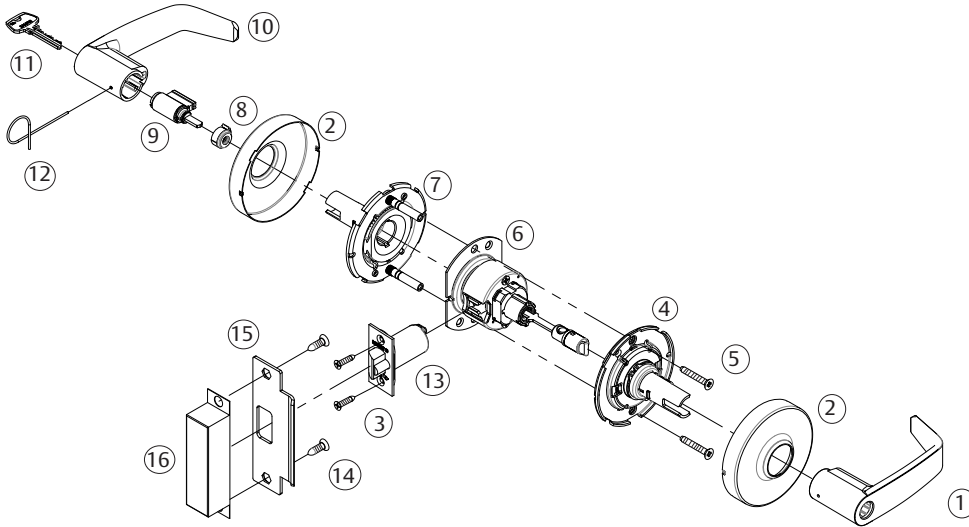


Fig.	Description
1	Inside lever handle
2	Rose/Scalp (2)
3	Screws - latch (2) #8-32 x 3/4"
4	Inside spring housing assembly
5	Screws - through-bolt (2) #10-32 x 1-1/4"
6	Lockbody assembly with mounting plate
7	Outside spring housing assembly
8	Cylinder spacer
9	Cylinder
10	Outside lever handle
11	Key
12	Push pin
13	Latch
14	Screws - strike (2) #12-24 x 3/4"
15	Strike
16	Strike box (Optional)

3

Door Preparation

1. Use template A8290 to mark the door (See Figure 1).
2. Drill the door according to the template.
3. Verify the dimensions (See Figure 2).
4. Install the strike (See Figure 3)

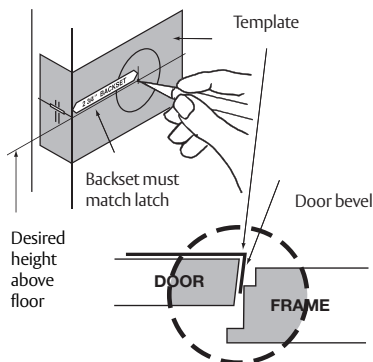


Figure 1

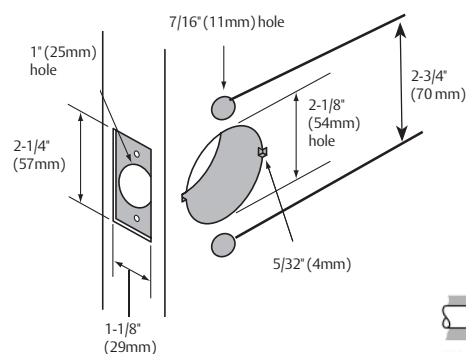


Figure 2

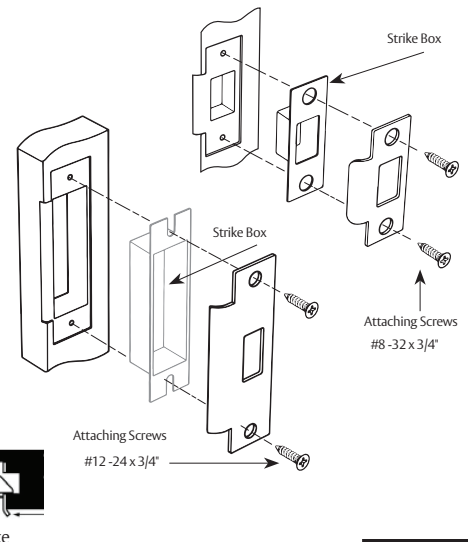


Figure 3

IMPORTANT

- The accuracy of door preparation is critical for proper functioning and security of this lever handle lock. Misalignment can cause premature wear and a lessening of security.
- Be sure to verify backset before marking and drilling door.

IMPORTANT: Deadlocking latch must stop on strike when door is closed.

4

Latch Installation

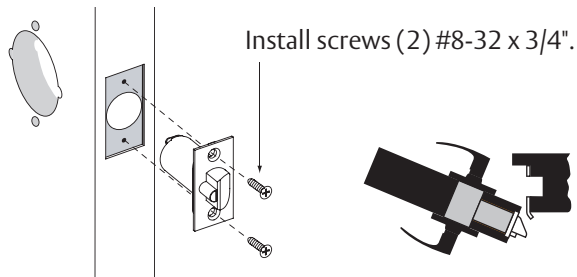


Figure 4

5

Adjust Lock for Door Thickness (if necessary)

Lock is factory preset for 1-3/4" (44mm) doors unless specified. To adjust lock to door thickness if other than 1-3/4" (44mm):

1. Remove trim assembly from the lockbody. (See Figure 5).
2. Rotate mounting plate to adjust for proper door thickness.
 - For 2" thick door the inside face of the mounting plate should be flush with the face of the bearing. (See 5a).
 - Verify correct position from the markings on the through-bolt stud, or by measuring from inside surface of the mounting plate to the centerline of the retractor (See 5b).
3. Reassemble the outside trim assembly to the lockbody.

Spin the mounting plate to the left to adjust for larger door thickness.

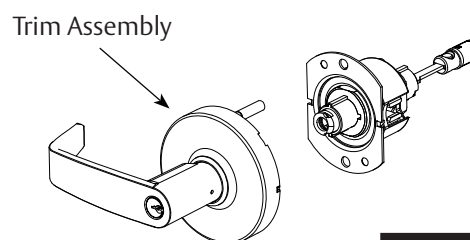


Figure 5

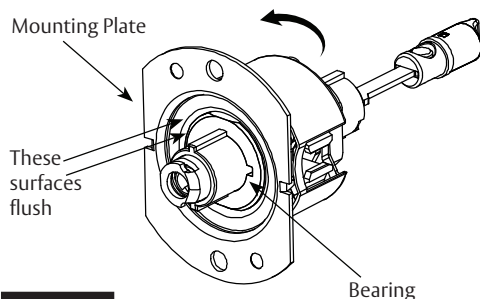


Figure 5a

Door Thickness	Dimension A
1-3/4" (44 mm)	7/8" (22 mm)
2" (50 mm)	1" (25 mm)
2-1/4" (57 mm)	1-1/8" (29 mm)

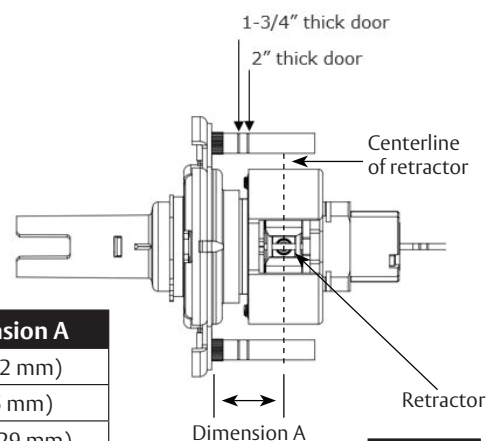


Figure 5b

6

Install Outside Assembly

To adjust lock to door thickness if other than 1-3/4" (44mm) refer to Section 5.

Insert lockbody into door from outside making sure that lockbody hooks latch case and retractor engages bolt tail(s). See Figure 6.

DO NOT FORCE. (If lockbody does not engage latch easily, check door preparation for errors.)

Latch bolt tail should be centered in depth of retractor. If it is not, refer to Section 5 to properly adjust the lock for door thickness.

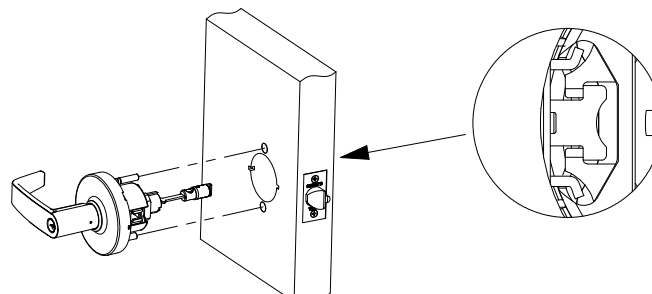


Figure 6

10X Line

Cylindrical Lockset

Installation Instructions

SARGENT®

ASSA ABLOY


7

Install Inside Components

1. Remove rose from inside spring housing assembly.
2. Align and insert inside spring housing onto the installed lockbody.
3. Install screws to tighten the lock to the door.
4. Orient dimples on the side of the rose horizontally at 3 and 9 o'clock position in line with the openings on the spring housing assembly. See Figure 7.
5. Install rose onto the inside spring housing assembly.
6. In the unlocked position, verify the button is adjusted properly. See Figure 8 for proper alignment. Adjust if necessary.
7. Install inside lever.

Note: Test for proper operation before closing door.

Figure 7

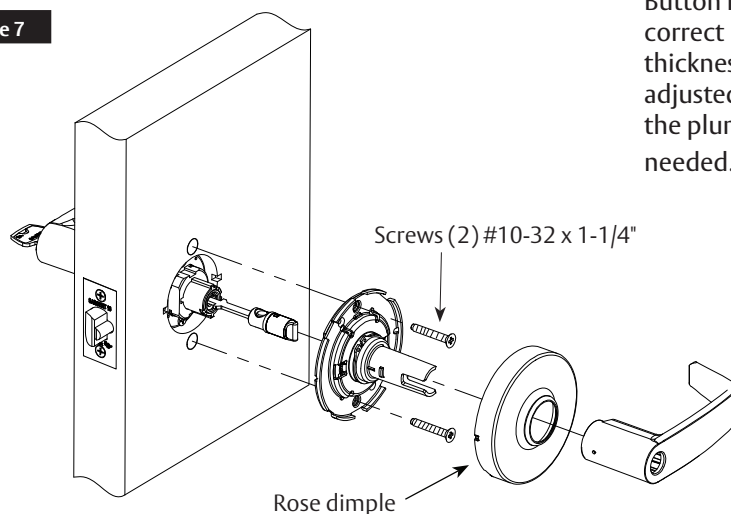

Button in-line with shank indicates correct position based upon door thickness. If the button needs to be adjusted, position it by depressing the plunger, moving it in or out as needed.

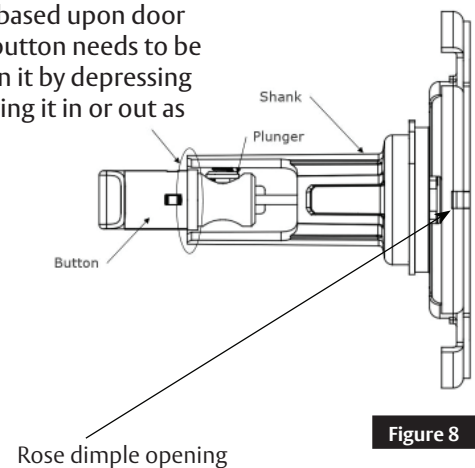


Figure 8

8

Cylinder Installation

a

Standard Cylinder (Figure 9)

IMPORTANT

Before installing cylinders:

- Use a flat blade screwdriver to rotate cam until the driver points are in a 6 and 12 o'clock position. See Figure 15 on page 5.

Note:

- For 10XG13 - See Section 11 on page 5.
- For 10XG30, 10XG37, 10XG54 - See Section 10 on page 5.

Cylinder spacer should be installed "snapped" on to the cylinder before installing into the outside trim assembly.


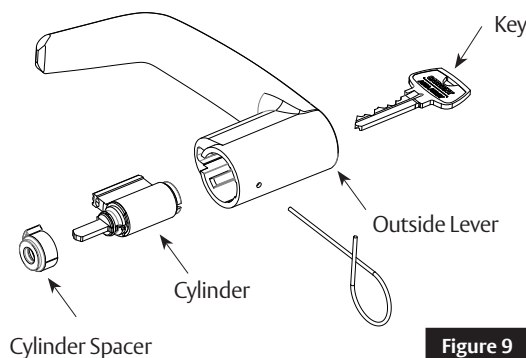


Figure 9

Correct Key Orientation During Assembly

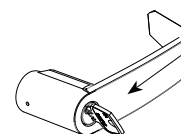

8

Cylinder Installation, continued

b

Interchangeable or Removable Core (Figure 10)

- Remove temporary construction core or plastic core. If keyed, use Control Key (stamped "C") rotate 15° and pull.
- Insert permanent core into lever with control key; rotate 15° and remove key.


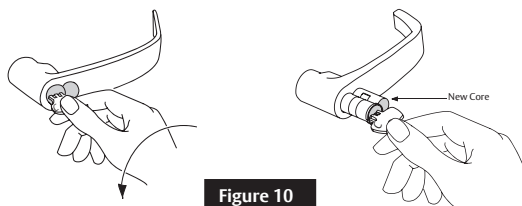



Figure 10

IMPORTANT

- Remove tailpiece from construction core and insert into new core. If using 7 pin cores, insert the 7 pin tail piece that's supplied with the lock, before installing the core into the lock.
- For XC LFIC cores, snap-on retainer must be installed onto tailpiece. Tail and retainer assembly will press fit onto back of core.

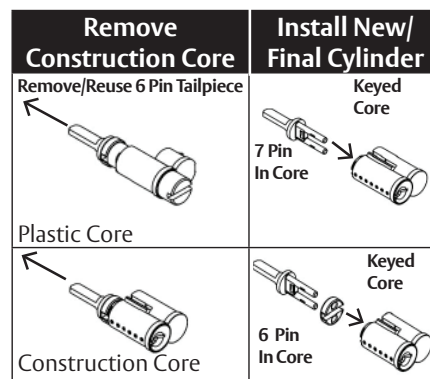

SFIC

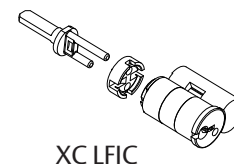

XC LFIC

9

Lever Removal & Installation

a

Standard Cylinder (Figure 11)

To Remove:

Rotate key 45° and hold. Depress lever catch with pin tool.

To Install:

With driver points at 6 and 12 (See Figure 15), rotate key 45° in either direction, and then slide the lever on over the lever catch. Confirm the lever will not pull off.

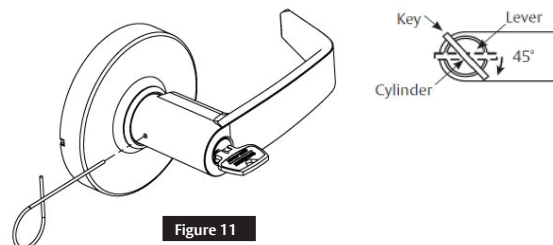


Figure 11

b

Interchangeable or Removable Core (Figure 12)

To Remove:

Remove core and tailpiece, using control key (stamped "C").

Insert slotted screwdriver or lever release tool into the cylinder opening and make contact with the lever catch.

Pull lever catch horizontally towards the opposite side of the cylinder opening and remove lever.

To Install:

Without the core installed, slide the lever over the lever catch. Confirm the lever will not pull off. Install core and tailpiece, using control key (Stamped "C").

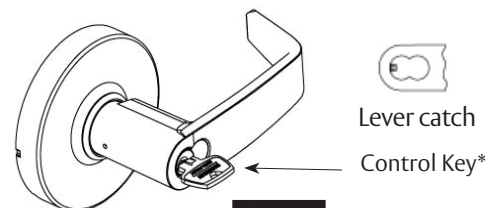


Figure 12

*Note

For 1-Bitted cylinders, utilize a control key cut 113511.

c

Plain Lever (Figure 13) & Push/Turn Button (Figure 14)

To Remove:

Depress lever catch with pin tool, remove lever.

To Install:

Slide lever on over the lever catch. Confirm the lever will not pull off.

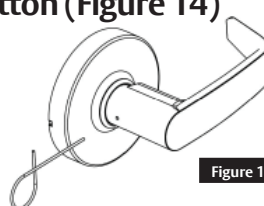


Figure 13

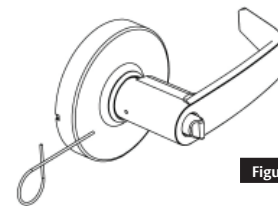


Figure 14

10X Line

Cylindrical Lockset

Installation Instructions


SARGENT®
ASSA ABLOY

10

Timing 10XG30, 10XG37 & 10XG54

1. Remove outside and inside levers (See Section 9).
2. Rotate all cams counterclockwise until it stops, using a flat tip screwdriver. (See Figure 15)
3. Re-install levers.
4. Test cylinder(s) with key before closing the door.

Figure 15

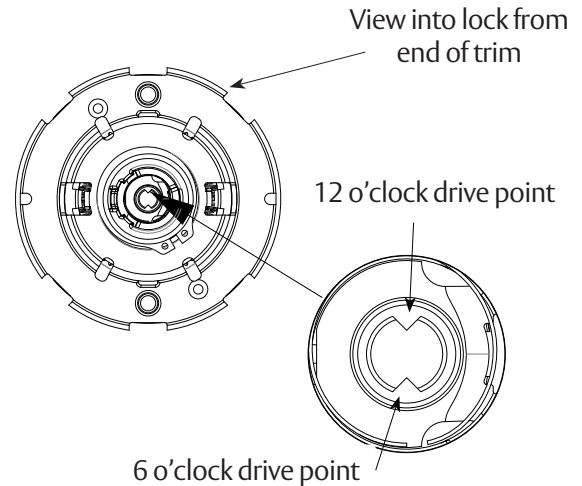

11

Other Instructions

a

Remove Outside Lever for Exit Latch 10XG13

1. Remove inside lever (See Section 9).
2. Remove rose.
3. Remove (2) mounting screws and inside housing assembly. See Figure 16.
4. Remove outside trim assembly.
5. Push and hold plug back (located inside of outside trim assembly). See Figure 17.
6. Push lever catch with push pin and remove lever.

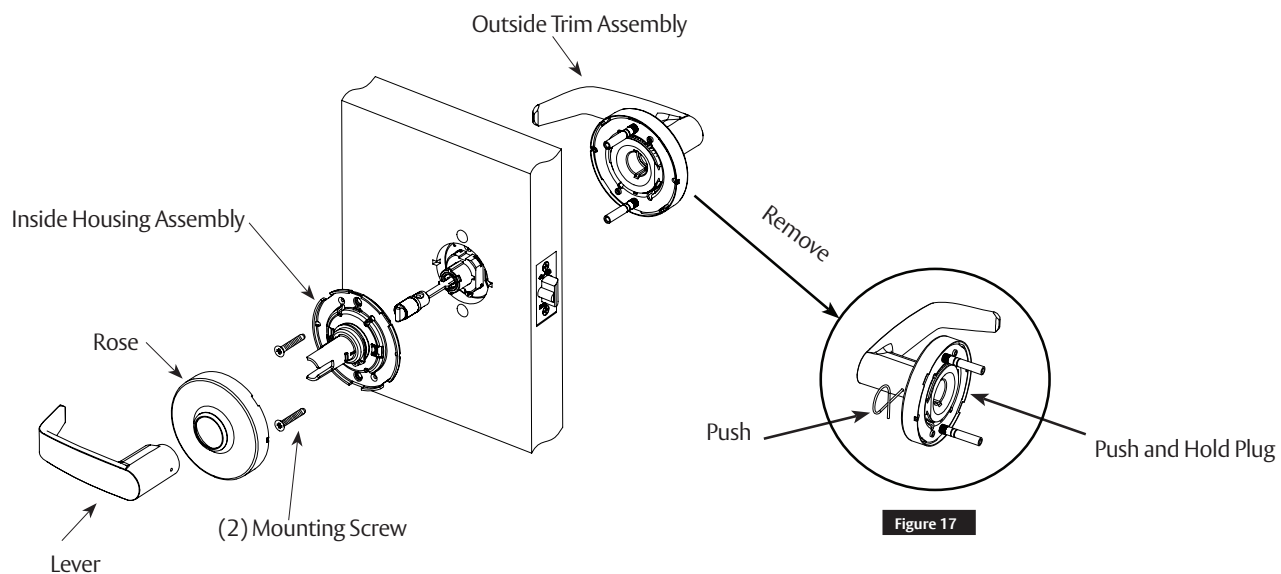


Figure 16

Figure 17

10X Line

Cylindrical Lockset

Installation Instructions

SARGENT®


ASSA ABLOY

11

Other Function Instructions, continued


b

Install Single Lever Pull 10XU93

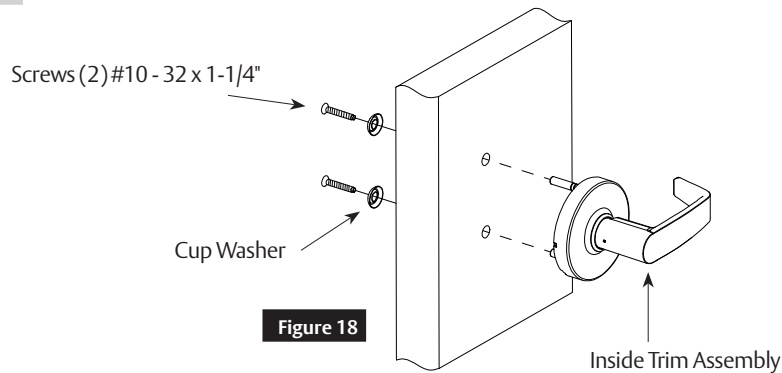

c

Install Double Lever Pull (10XU94/ 10XU94-2)

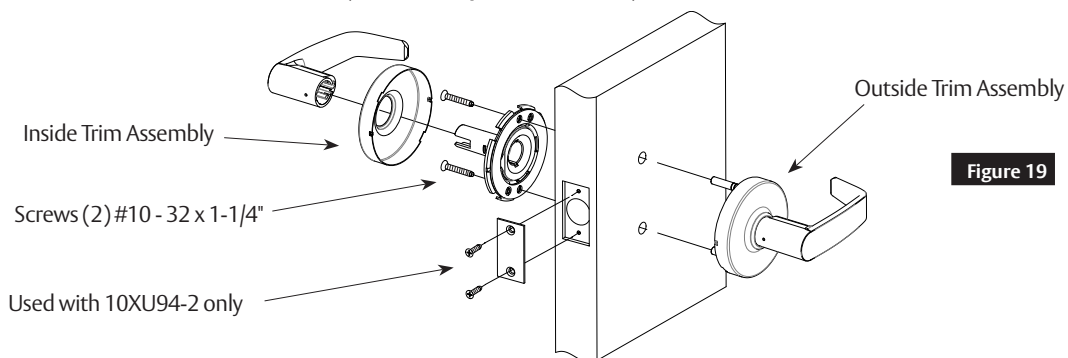

12


Miscellaneous Options

a

1-3/8" Doors (1-Option)

Install (1) adapter plate between the door and rose assemblies (both sides).

- Inside trim to be aligned with holes marked screw slot.
- Outside trim through-bolts to be aligned with through-bolt holes marked on adapter plate.

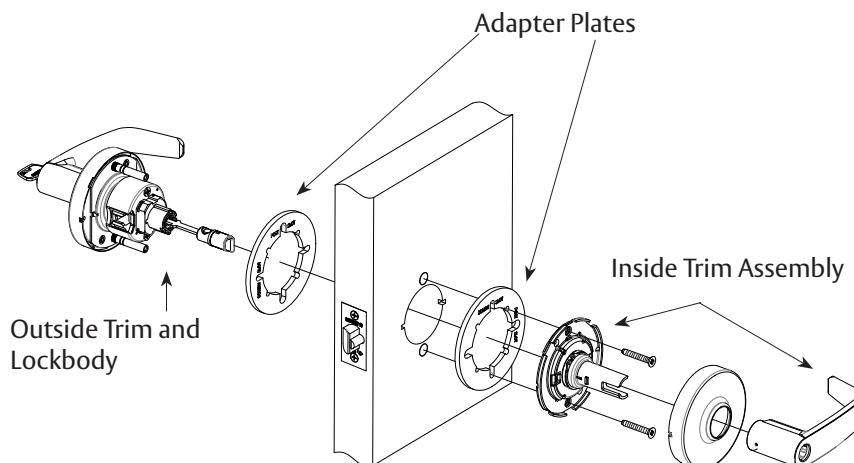

10X Line

Cylindrical Lockset

Installation Instructions

SARGENT®

ASSA ABLOY


12

Miscellaneous Options

b

Lever to Accept Schlage® LFIC (SF- Option)


1. Provided less core.
2. Tailpiece included with lock.
3. Attach tailpiece to Schlage® LFIC and insert into the lever.

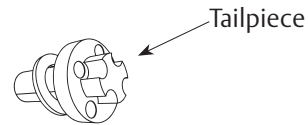

c

Lever to Accept Schlage® or Yale® Fixed Core Cylinder (30- or YC- Option)


1. Provided less core.
2. Depress cap pin and unscrew end cap to remove tailpiece from competitor cylinder.
3. Insert new tailpiece, in orientation shown.
4. Re-assemble end cap over new tailpiece.

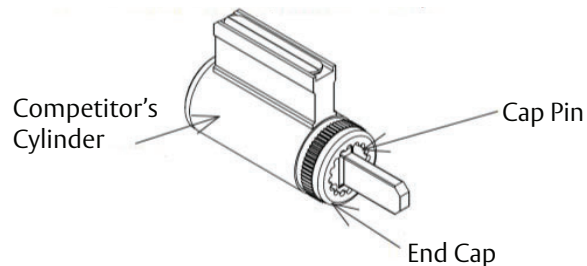


d

Lever to Accept Yale® LFIC (YRC- Option)

1. Provided less core.
2. Slide provided spacer over tailpiece

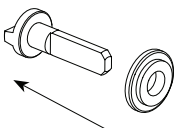

3. Insert driver assembly into back of core.

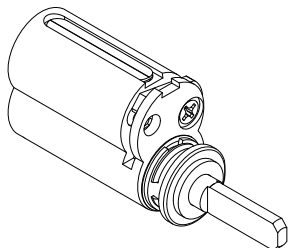

10X Line

Cylindrical Lockset

Installation Instructions

SARGENT®

ASSA ABLOY

12


Miscellaneous Options

e


10XG50 Hotel Function Adjustment

- To adjust timing of hotel cylinder key lockout indicator

1. Remove lever, cylinder, and spacer from outside trim. The button on the inside trim should be in the unlocked position.
2. Insert adjustment tool (provided with lock) into interior cap as shown below.
3. Rotate cap clockwise until fully tight.

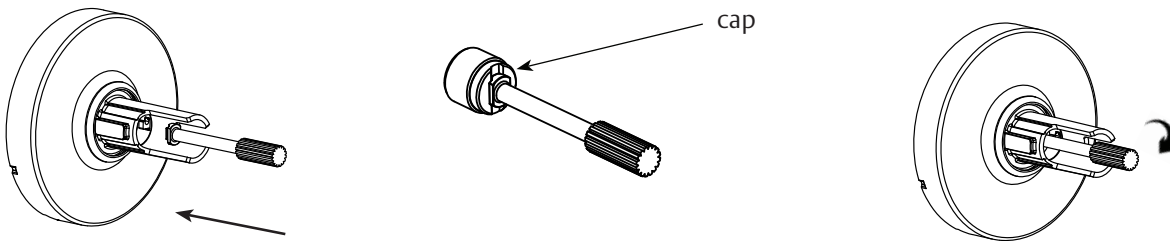

4. Rotate back counter-clockwise until tool handle is approximately in line with the end of the shank (as shown) AND cap slot orientation is vertical. Slot alignment may require a slight rotation in either direction.

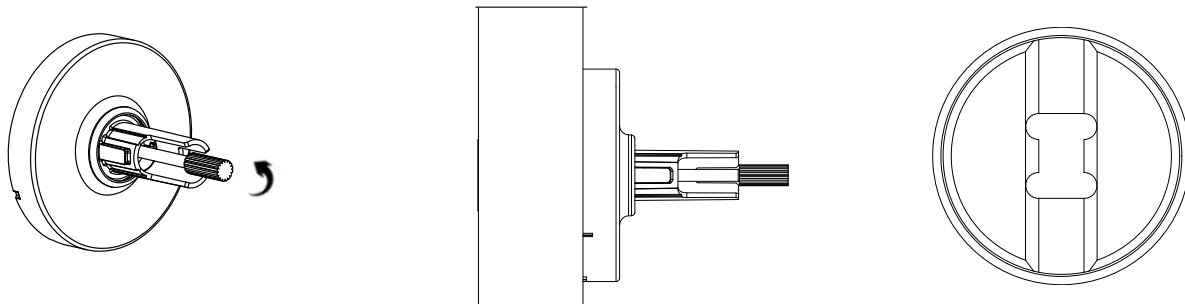

5. Remove adjustment tool and re-install spacer, cylinder, and lever. Lever install will require key be rotated 90° counter-clockwise.
6. Test to confirm that both the operating and the emergency key work properly in both the unlocked and locked (pushed and turned on button) positions.
 - If the operating key is still working in the locked position, adjust cap a half of a turn CCW and retest.
 - If the emergency key is not working properly in the locked position, adjust cap a half of a turn CW and retest.

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.